

# AsahiKASEI

ASAHI KASEI EMD

# AKD4635-A

## AK4635 Evaluation board Rev.1

**GENERAL DESCRIPTION**

AKD4635-A is an evaluation board for the AK4635, 16bit mono CODEC with MIC/SPK/VIDEO amplifier. The AKD4635-A can evaluate A/D converter and D/A converter separately in addition to loopback mode (A/D → D/A). AKD4635-A also has the digital audio interface and can achieve the interface with digital audio systems via opt-connector.

■ **Ordering guide**

AKD4635-A --- Evaluation board for AK4635  
 (Cable for connecting with printer port of IBM-AT, compatible PC and control software are packed with this. This control software does not support Windows NT.)

**FUNCTION**

- **DIT/DIR with optical input/output**
- **BNC connector for an external clock input**
- **10pin Header for serial control mode**

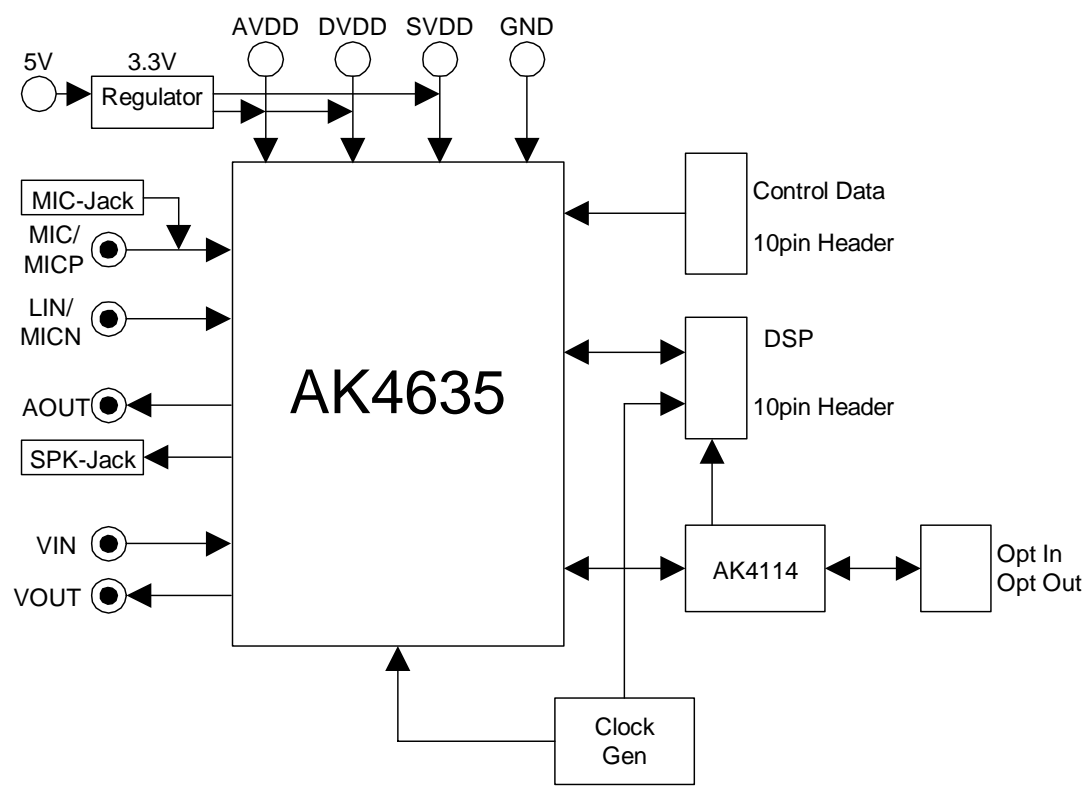


Figure 1. AKD4635-A Block Diagram


\* Circuit diagram and PCB layout are attached at the end of this manual.

## Evaluation Board Manual

### ■ Operation sequence


1) Set up the power supply lines.

1-1) When AVDD, DVDD, SVDD and VCC are supplied from the regulator. <Default>

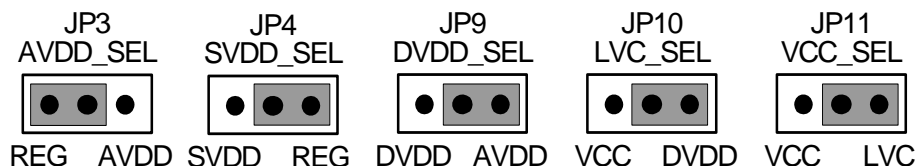

|        |          |        |  |
|--------|----------|--------|--|
| [REG]  | (red)    | = 5V   |  |
| [AVDD] | (orange) | = open | : 3.3V is supplied to AVDD of AK4635 from regulator. |
| [DVDD] | (orange) | = open | : 3.3V is supplied to DVDD of AK4635 from regulator. |
| [SVDD] | (blue)   | = open | : 3.3V is supplied to SVDD of AK4635 from regulator. |
| [VCC]  | (orange) | = open | : 3.3V is supplied to logic block from regulator.    |
| [AVSS] | (black)  | = 0V   | : for analog ground                                  |
| [SVSS] | (black)  | = 0V   | : for analog ground                                  |
| [DGND] | (black)  | = 0V   | : for logic ground                                   |

1-2) When AVDD, DVDD, SVDD and VCC are supplied from the power supply connectors.

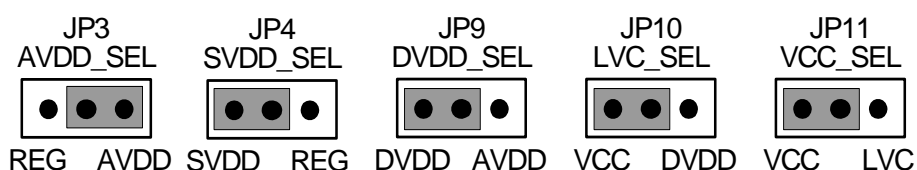

|        |          |              |                                  |
|--------|----------|--------------|----------------------------------|
| [REG]  | (red)    | = open.      |                                  |
| [AVDD] | (orange) | = 2.8 ~ 3.6V | : for AVDD of AK4635 (typ. 3.3V) |
| [DVDD] | (orange) | = 2.7 ~ 3.6V | : for DVDD of AK4635 (typ. 3.3V) |
| [SVDD] | (blue)   | = 2.7 ~ 4.0V | : for SVDD of AK4635 (typ. 3.3V) |
| [VCC]  | (orange) | = 2.7 ~ 3.6V | : for logic (typ. 3.3V)          |
| [AVSS] | (black)  | = 0V         | : for analog ground              |
| [SVSS] | (black)  | = 0V         | : for analog ground              |
| [DGND] | (black)  | = 0V         | : for logic ground               |

\* Each supply line should be distributed from the power supply unit.  
 DVDD and VCC must be same voltage level.

2) Set up the evaluation mode, jumper pins and DIP switches. (See the followings.)

3) Power on.

The AK4635 and AK4114 should be reset once bringing SW1, 2 “L” upon power-up.

## ■ Evaluation mode

In case of AK4635 evaluation using AK4114, it is necessary to correspond to audio interface format for AK4635 and AK4114. About AK4635's audio interface format, refer to datasheet of AK4635. About AK4114's audio interface format, refer to Table 2 in this manual.


### Applicable Evaluation Mode

- (1) Evaluation of loop-back mode (A/D → D/A) : PLL, Master Mode (Default)
- (2) Evaluation of loop-back mode (A/D → D/A) : PLL, Slave Mode  
(PLL Reference CLOCK: MCKI pin)
- (3) Evaluation of loop-back mode (A/D → D/A) : PLL, Slave Mode  
(PLL Reference CLOCK: BICK or FCK pin)
- (4) Evaluation of loop-back mode (A/D → D/A) : EXT, Master Mode
- (5) Evaluation of using DIR/DIT of AK4114 (opt-connector) : EXT, Slave Mode



**(1) Evaluation of loop-back mode (A/D → D/A) : PLL, Master Mode (Default)**
**a) Set up jumper pins of MCKI clock**

Set “No.8 of SW3” to “H”. X’tal of 12MHz, 13.5MHz, 24MHz or 27MHz can be set in X1. X’tal of 12MHz (Default) is set on the AKD4635-A.


When an external clock (11.2896MHz, 12MHz, 12.288MHz, 13MHz, 24MHz or 27MHz) through a RCA connector (J8: EXT/BICK) is supplied, select EXT on JP21 (MCLK\_SEL) and short JP17 (XTE). JP23 (EXT1) and R26 should be properly selected in order to match the output impedance of the clock generator.

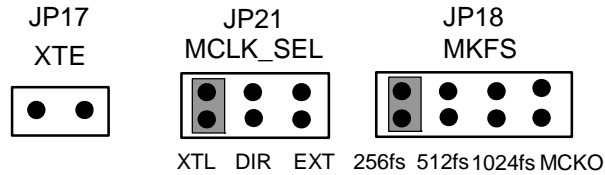
**b) Set up jumper pins of BICK clock**

Output frequency (16fs/32fs/64fs) of BICK should be set by “BCKO1-0 bit” in the AK4635. There is no necessity for set up JP19.

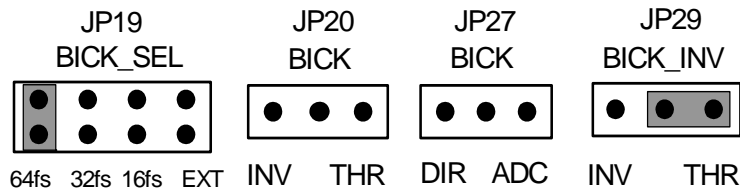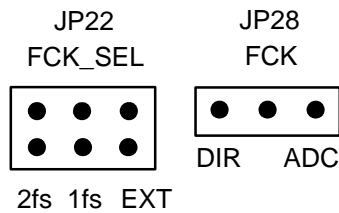

**c) Set up jumper pins of FCK clock**

**d) Set up jumper pins of DATA**

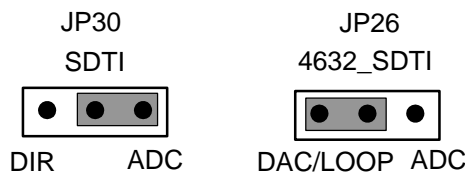When the AK4635 is evaluated by loop-back mode (A/D → D/A), the jumper pins should be set to the following.





**(2) Evaluation of loop-back mode (A/D → D/A) : PLL, Slave Mode (PLL Reference CLOCK: MCKI pin)**
**a) Set up jumper pins of MCKI clock**

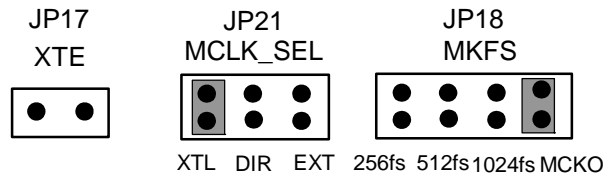X'tal of 12MHz, 13.5MHz, 24MHz or 27MHz can be set in X1. X'tal of 12 MHz (Default) is set on the AKD4635-A. In this case, the AK4635 corresponds to PLL reference clock of 12MHz. In this evaluation mode, the output clock from MCKO-pin of the AK4635 is supplied to a divider (U3: 74VHC4040), BICK and FCK clocks are generated by the divider. Then "MCKO bit" in the AK4635 is set to "1". When an external clock through a RCA connector (J8: EXT/BICK) is supplied, select EXT on JP21 (MCLK\_SEL) and short JP17 (XTE). JP23 (EXT1) and R26 should be properly selected in order to match the output impedance of the clock generator.


**b) Set up jumper pins of BICK clock**

Input frequency of BICK should be set 64fs/32fs/16fs by JP19.

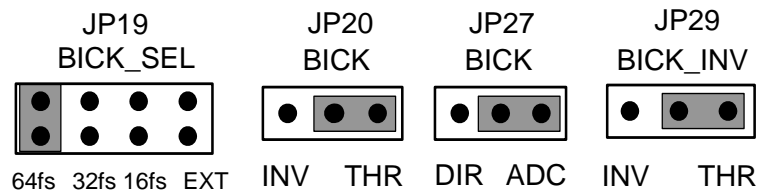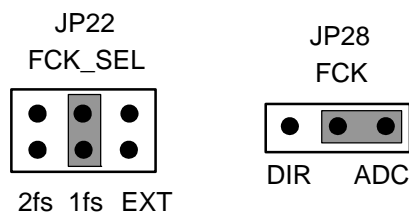
**c) Set up jumper pins of FCK clock**

**d) Set up jumper pins of DATA**


When the AK4635 is evaluated by loop-back mode (A/D → D/A), the jumper pins should be set to the following.



### (3) Evaluation of loop-back mode (A/D → D/A) : PLL, Slave Mode (PLL Reference CLOCK: BICK or FCK pin)

#### a) Set up jumper pins of MCKI clock

An external clock through a RCA connector (J8: EXT/BICK), BICK and FCK clocks are generated by the divider. JP23 (EXT1) and R26 should be properly selected in order to match the output impedance of the clock generator.

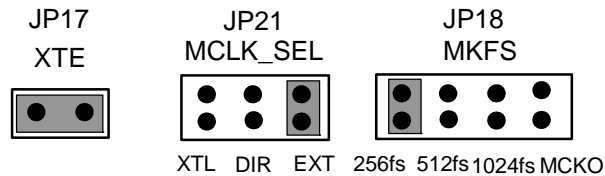


\*When BICK and FCK clocks through a RCA connector (J8, J9) is supplied, select XTL on JP21.

\*When X'tal is used, X'tal of 256fs, 512fs or 1024fs can be set in X1. Set OPEN on JP17, and select XTL on JP21.


#### b) Set up jumper pins of BICK clock

Input frequency of BICK should be set 64fs/32fs/16fs by JP19.

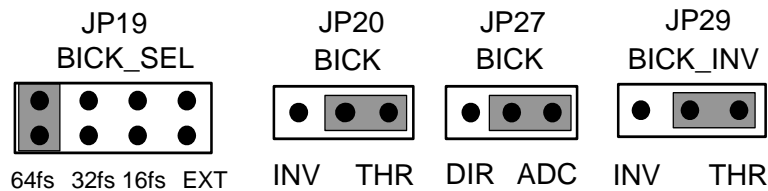

\*When BICK and FCK clocks through a RCA connector (J8, J9) is supplied, select EXT on JP19. JP23 (EXT1) and R26 should be properly selected in order to match the output impedance of the clock generator.

#### c) Set up jumper pins of FCK clock

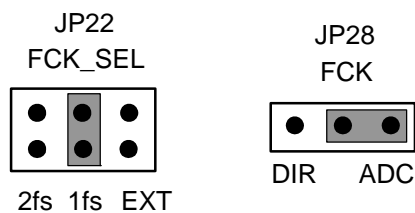

\*When BICK and FCK clocks through a RCA connector (J8, J9) is supplied, select EXT on JP22. JP24 (EXT1) and R27 should be properly selected in order to match the output impedance of the clock generator.

#### d) Set up jumper pins of DATA


When the AK4635 is evaluated by loop-back mode (A/D → D/A), the jumper pins should be set to the following.



#### (4) Evaluation of loop-back mode (A/D → D/A) : EXT, Master Mode


##### a) Set up jumper pins of MCKI clock

Set “No.8 of SW3” to “H”. An external clock (256fs, 512fs or 1024fs) through a RCA connector (J8: EXT/BICK) is supplied. JP23 (EXT1) and R26 should be properly selected in order to match the output impedance of the clock generator.

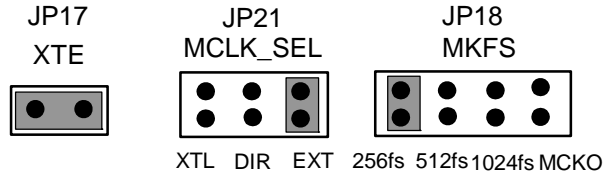


##### b) Set up jumper pins of BICK clock

Output frequency (32fs or 64fs) of BICK should be set by “BCKO1-0 bit” in the AK4635. There is no necessity for set up JP19.

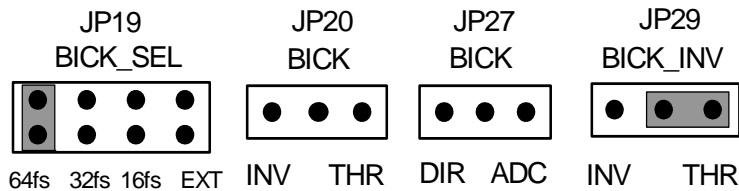

##### c) Set up jumper pins of FCK clock

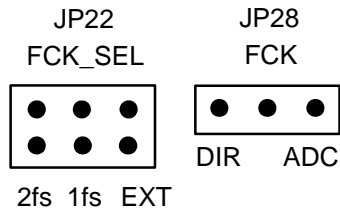


##### d) Set up jumper pins of DATA

When the AK4635 is evaluated by loop-back mode (A/D → D/A), the jumper pins should be set to the following.




**(5) Evaluation of using DIR/DIT of AK4114 (opt-connector) : EXT, Slave Mode**


a) Set up jumper pins of MCKI clock

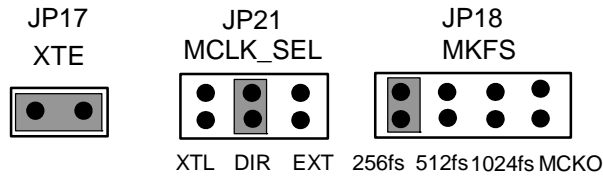

b) Set up jumper pins of BICK clock

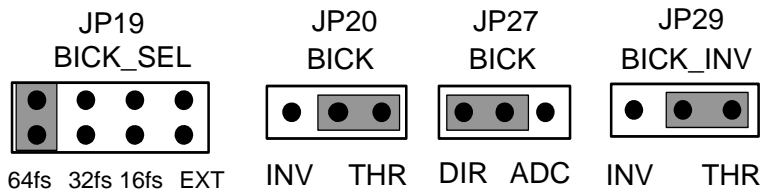

c) Set up jumper pins of FCK clock

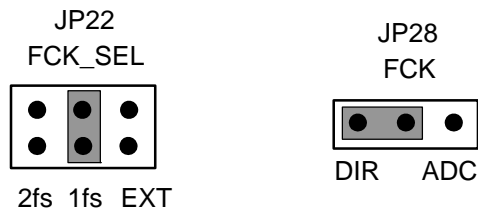


d) Set up jumper pins of DATA

When D/A converter of the AK4635 is evaluated by using DIR of AK4114, the jumper pins should be set to the following.



When A/D converter of the AK4635 is evaluated by using DIT of AK4114, the jumper pins should be set to the following.

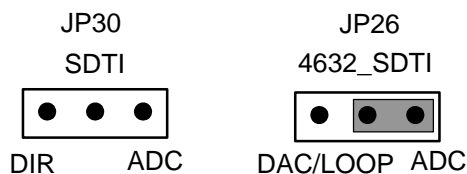

## ■ DIP Switch set up

[SW3] (MODE) : Mode Setting of AK4635 and AK4114  
ON is “H”, OFF is “L”.

| No. | Name  | OFF (“L”)                                    | ON (“H”)    | Default |
|-----|-------|--|-------------|---------|
| 1   | DIF0  | AK4114 Audio Format Setting<br>See Table 2   |             | Off     |
| 2   | DIF1  |  |             | Off     |
| 3   | DIF2  |  |             | On      |
| 4   | CM0   | Clock Operation Mode select<br>See Table 3   |             | Off     |
| 5   | CM1   |  |             | On      |
| 6   | OCKS0 | Master Clock Frequency Select<br>See Table 4 |             | Off     |
| 7   | OCKS1 |  |             | Off     |
| 8   | M/S   | Slave mode                                   | Master mode | On      |

Note. When the AK4635 is evaluated Master mode, “M/S” is set to “H”.

Table 1. Mode Setting for AK4635 and AK4114

| Register setting for AK4635 |          | Setting for AK4114 Audio Interface Format |      |      |                         |                         | Default |
|-----------------------------|----------|---|------|------|-------------------------|-------------------------|---------|
| DIF1 bit                    | DIF0 bit | DIF0                                      | DIF1 | DIF2 | DAUX                    | SDTO                    |         |
| 0                           | 1        | L   | L    | L    | 24bit, Left justified   | 16bit, Right justified  | Default |
| 1                           | 0        | L   | L    | H    | 24bit, Left justified   | 24bit, Left justified   |         |
| 1                           | 1        | H   | L    | H    | 24bit, I <sup>2</sup> S | 24bit, I <sup>2</sup> S |         |

Note. When the AK4635 is evaluated by using DIR/DIT of AK4114, “No.8 of SW3” is set to “L”.

Table 2. Setting for AK4114 Audio Interface Format

| Mode | CM0 | CM1 | UNLOCK | PLL | X'tal | Clock source | SDTO | Default |
|------|-----|-----|--------|-----|-------|--------------|------|---------|
| 0    | L   | L   | -      | ON  | OFF   | PLL          | RX   |         |
| 1    | H   | L   | -      | OFF | ON    | X'tal        | DAUX |         |
| 2    | L   | H   | 0      | ON  | ON    | PLL          | RX   |         |
|      |     |     | 1      | ON  | ON    | X'tal        | DAUX |         |
| 3    | H   | H   | -      | ON  | ON    | X'tal        | DAUX |         |

ON: Oscillation (Power-up), OFF: STOP (Power-down)

Table 3. Clock Operation Mode select

| No. | OCKS0 | OCKS1 | MCKO1 | MCKO2 | X'tal | Default |
|-----|-------|-------|-------|-------|-------|---------|
| 0   | L     | L     | 256fs | 256fs | 256fs |         |
| 2   | L     | H     | 512fs | 256fs | 512fs |         |

Table 4. Master Clock Frequency Select

## ■ Other jumper pins set up

1. JP1 (GND) : Analog ground and Digital ground  
     OPEN : Separated.  
     SHORT : Common. (The connector “DGND” can be open.) <Default>
  
2. JP3 (AVDD\_SEL) : AVDD of the AK4635  
     REG : AVDD is supplied from the regulator (“AVDD” jack should be open). < Default >  
     AVDD : AVDD is supplied from “AVDD ” jack.
  
3. JP4 (SVDD\_SEL) : SVDD of the AK4635  
     REG : SVDD is supplied from the regulator (“SVDD” jack should be open). < Default >  
     SVDD : SVDD is supplied from “SVDD ” jack.
  
4. JP9 (DVDD\_SEL) : DVDD of the AK4635  
     AVDD : DVDD is supplied from “AVDD”. < Default >  
     DVDD : DVDD is supplied from “DVDD ” jack.
  
5. JP10 (LVC\_SEL) : Logic block of LVC is selected supply line.  
     DVDD : Logic block of LVC is supplied from “DVDD”. < Default >  
     VCC : Logic block of LVC is supplied from “VCC ” jack.
  
6. JP11 (VCC\_SEL) : Logic block is selected supply line.  
     LVC : Logic is supplied from supply line of LVC. < Default >  
     VCC : Logic block of LVC is supplied from “VCC ” jack.
  
7. JP25 (MCKO\_SEL) : Master Clock Frequency is selected clock from MCKO1 or MCKO2 of the AK4114.  
     MCKO1 : The check from MCKO1 of AK4114 is provided to MCKI of the AK4635. < Default >  
     MCKO2 : The check from MCKO2 of AK4114 is provided to MCKI of the AK4635.
  
8. JP102 (I2C) : Control Interface is selected mode.  
     OPEN : 3-wire Serial Control Mode. < Default >  
     SHORT : I<sup>2</sup>C-bus Control Mode. (Not used in this board.)
  
9. JP103 (MCKO) : Master Clock Frequency is selected from AK4635.  
     OPEN : Not supply.  
     SHORT : Supplied from AK4635. < Default >

■ **The function of the toggle SW**

[SW1] (DIR) : Power control of AK4114. Keep “H” during normal operation.  
 Keep “L” when AK4114 is not used.

[SW2] (PDN) : Power control of AK4635. Keep “H” during normal operation.

■ **Indication for LED**

[LED1] (ERF): Monitor INT0 pin of the AK4114. LED turns on when some error has occurred to AK4114.

■ **Serial Control**

The AK4635 can be controlled via the printer port (parallel port) of IBM-AT compatible PC. Connect PORT4 (CTRL) with PC by 10 wire flat cable packed with the AKD4635-A

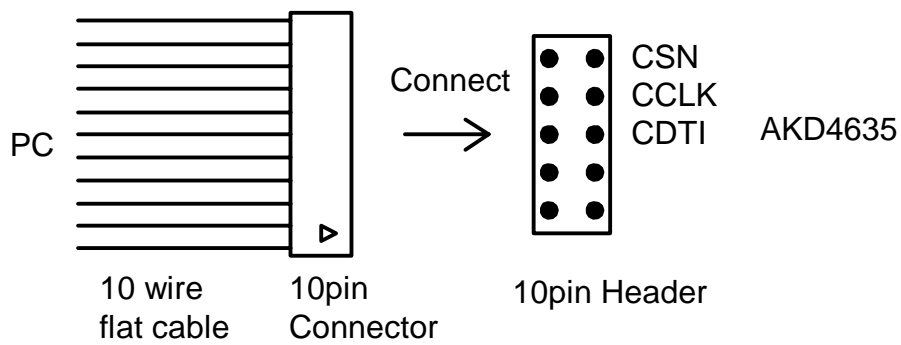


Figure 2. Connect of 10 wire flat cable

## ■ Analog Input / Output Circuits

### (1) Input Circuits

#### a) MIC/MICP Input Circuit



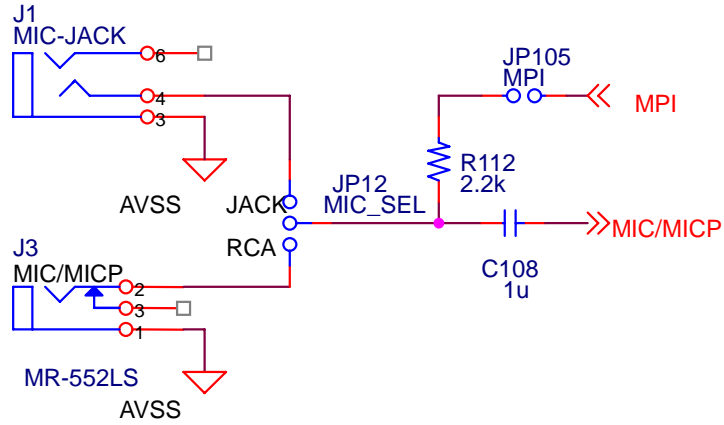


Figure 3. MIC/MICP Input Circuit

(a-1) Analog signal is input to MIC pin via J1 connector.

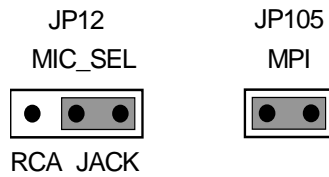

(a-2) Analog signal is input to MIC/MICP pin via J3 connector.

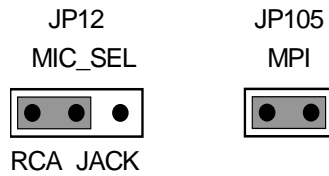

b) LIN/MICN Input Circuit


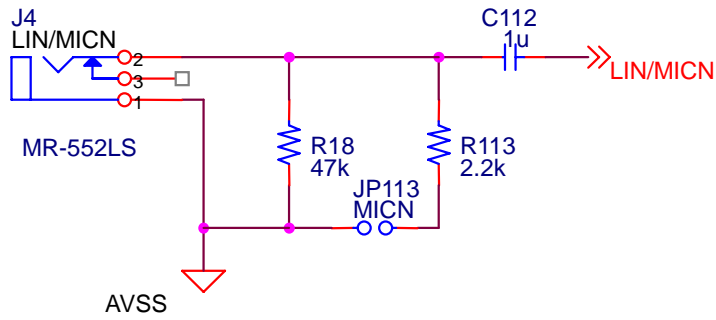


Figure 4. LIN/MICN Input Circuit

 (b-1) LIN is input from J4.



(b-2) MICN is input from J4.

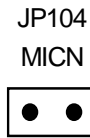

c) VIN Input Circuit

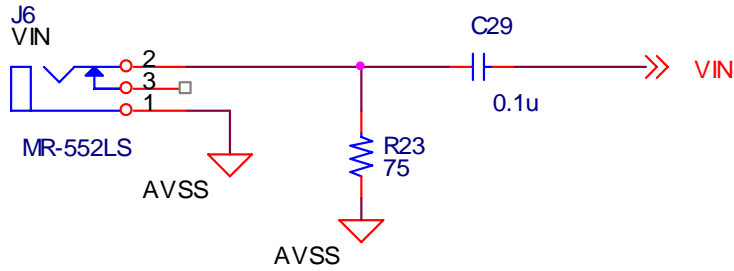


Figure 5. VIN Input Circuit

(2) Output Circuits

a) AOUT Output Circuit

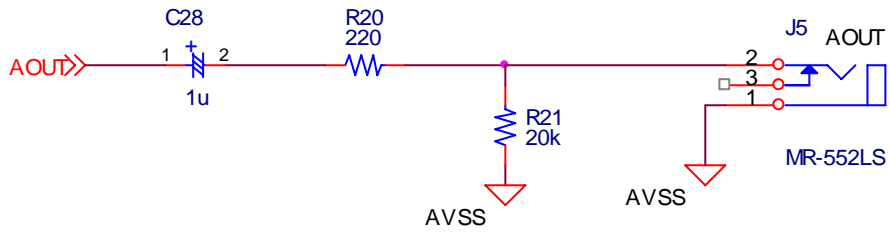


Figure 6. AOUT Output Circuit

b) VOUT Output Circuit

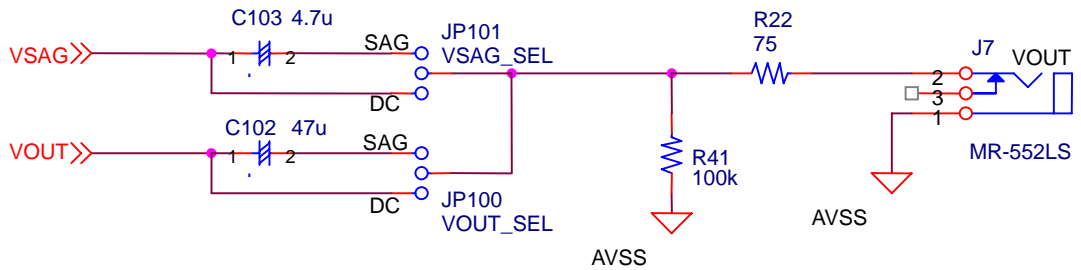


Figure 7. VOUT Output Circuit

(b-1) "DC Output" is output from J7 connector.



(b-2) "SAG Trimming Circuit" is output from J7 connector.



C) SPK Output Circuit

Note. When mini-jack is inserted or pulled out J2 (SPK-JACK) connector, JP13 (SPP\_SEL) and JP14 (SPN\_SEL) should be open, or “PMSPK bit” in the AK4635 should be set to “0”.



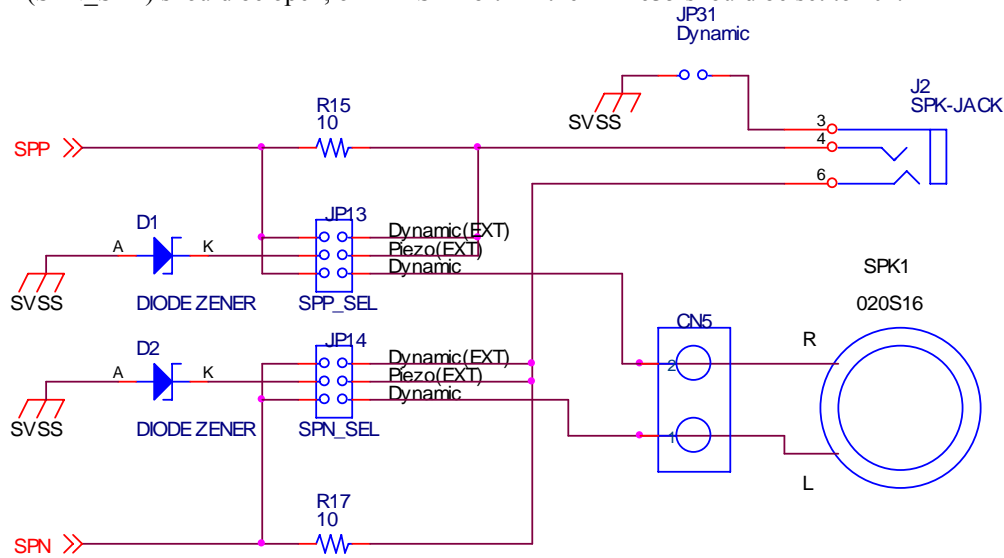


Figure 8. SPK Output Circuit


(C-1) “Dynamic Speaker” of external is evaluated by using J2 (SPK-JACK) connector.

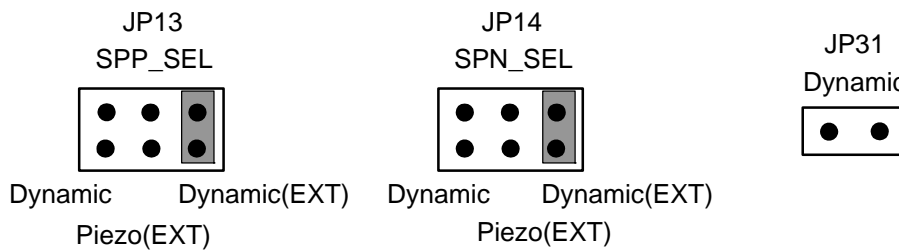

(C-2) “Piezo (Ceramic) Speaker” of external is evaluated by using J2 (SPK-JACK) connector.

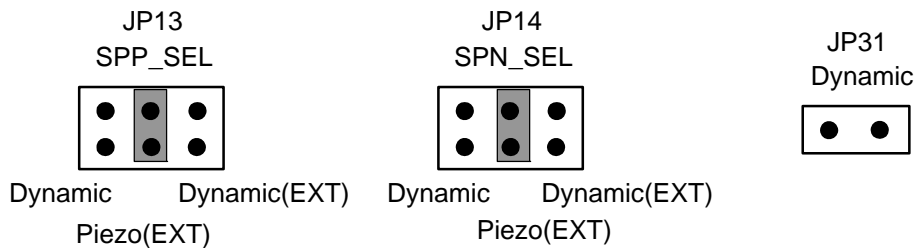

(C-3) Analog signal of SPP/SPN pins are output “Dynamic Speaker” on the evaluation (SPK1).

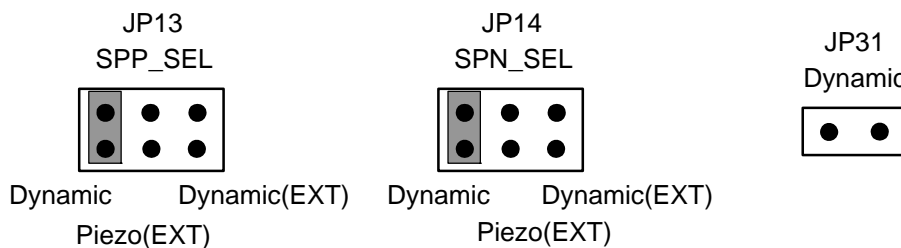

\* AKEMD assumes no responsibility for the trouble when using the above circuit examples.

## Control Software Manual

### ■ Set-up of evaluation board and control software

1. Set up the AKD4635-A according to previous term.
2. Connect IBM-AT compatible PC with AKD4635-A by 10-line type flat cable (packed with AKD4635-A). Take care of the direction of 10pin header. (Please install the driver in the CD-ROM when this control software is used on Windows 2000/XP. Please refer “Installation Manual of Control Software Driver by AKM device control software”. In case of Windows95/98/ME, this installation is not needed. This control software does not operate on Windows NT.)
3. Insert the CD-ROM labeled “AKD4635 Evaluation Kit” into the CD-ROM drive.
4. Access the CD-ROM drive and double-click the icon of “akd4635.exe” to set up the control program.
5. Then please evaluate according to the follows.

### ■ Operation flow

Keep the following flow.

1. Set up the control program according to explanation above.
2. Click “Port Reset” button.
3. Click “Write default” button

### ■ Explanation of each buttons

1. [Port Reset] : Set up the USB interface board (AKDUSBIF-A) when using the board.
2. [Write default] : Initialize the register of the AK4635.
3. [All Write] : Write all registers that is currently displayed.
4. [Function1] : Dialog to write data by keyboard operation.
5. [Function2] : Dialog to write data by keyboard operation.
6. [Function3] : The sequence of register setting can be set and executed.
7. [Function4] : The sequence that is created on [Function3] can be assigned to buttons and executed.
8. [Function5] : The register setting that is created by [SAVE] function on main window can be assigned to buttons and executed.
9. [SAVE] : Save the current register setting.
10. [OPEN] : Write the saved values to all register.
11. [Write] : Dialog to write data by mouse operation.
12. [Filter] : Set Programmable Filter (HPF, LPF, EQ1~5) of AK4635 easily.

### ■ Indication of data

Input data is indicated on the register map. Red letter indicates “H” or “1” and blue one indicates “L” or “0”. Blank is the part that is not defined in the datasheet.

## ■ Explanation of each dialog

### 1. [Write Dialog]: Dialog to write data by mouse operation

There are dialogs corresponding to each register.

Click the [Write] button corresponding to each register to set up the dialog. If you check the check box, data becomes "H" or "1". If not, "L" or "0".

If you want to write the input data to the AK4635, click [OK] button. If not, click [Cancel] button.

### 2. [Function1 Dialog] : Dialog to write data by keyboard operation

Address Box: Input registers address in 2 figures of hexadecimal.

Data Box: Input registers data in 2 figures of hexadecimal.

If you want to write the input data to the AK4635, click [OK] button. If not, click [Cancel] button.

### 3. [Function2 Dialog] : Dialog to evaluate IVOL, OVOL.

There are dialogs corresponding to register of 09h and 0Ah.

Address Box: Input registers address in 2 figures of hexadecimal.

Start Data Box: Input starts data in 2 figures of hexadecimal.

End Data Box: Input end data in 2 figures of hexadecimal.

Interval Box: Data is written to the AK4635 by this interval.

Step Box: Data changes by this step.

Mode Select Box:

If you check this check box, data reaches end data, and returns to start data.

[Example] Start Data = 00, End Data = 09

Data flow: 00 01 02 03 04 05 06 07 08 09 09 08 07 06 05 04 03 02 01 00

If you do not check this check box, data reaches end data, but does not return to start data.

[Example] Start Data = 00, End Data = 09

Data flow: 00 01 02 03 04 05 06 07 08 09

If you want to write the input data to the AK4635, click [OK] button. If not, click [Cancel] button.

## 4. [SAVE] and [OPEN]

### 4-1. [SAVE]

All of current register setting values displayed on the main window are saved to the file. The extension of file name is “akr”.

<Operation flow>

- (1) Click [SAVE] Button.
- (2) Set the file name and click [SAVE] Button. The extension of file name is “akr”.

### 4-2. [OPEN]

The register setting values saved by [SAVE] are written to the AK4635. The file type is the same as [SAVE].

<Operation flow>

- (1) Click [OPEN] Button.
- (2) Select the file (\*.akr) and Click [OPEN] Button.

### 5. [Function3 Dialog]

The sequence of register setting can be set and executed.

(1) Click [F3] Button.

(2) Set the control sequence.

Set the address, Data and Interval time. Set “-1” to the address of the step where the sequence should be paused.

(3) Click [START] button. Then this sequence is executed.

The sequence is paused at the step of Interval="-1". Click [START] button, the sequence restarts from the paused step.

This sequence can be saved and opened by [Save] and [OPEN] button on the Function3 window. The extension of file name is “aks”.

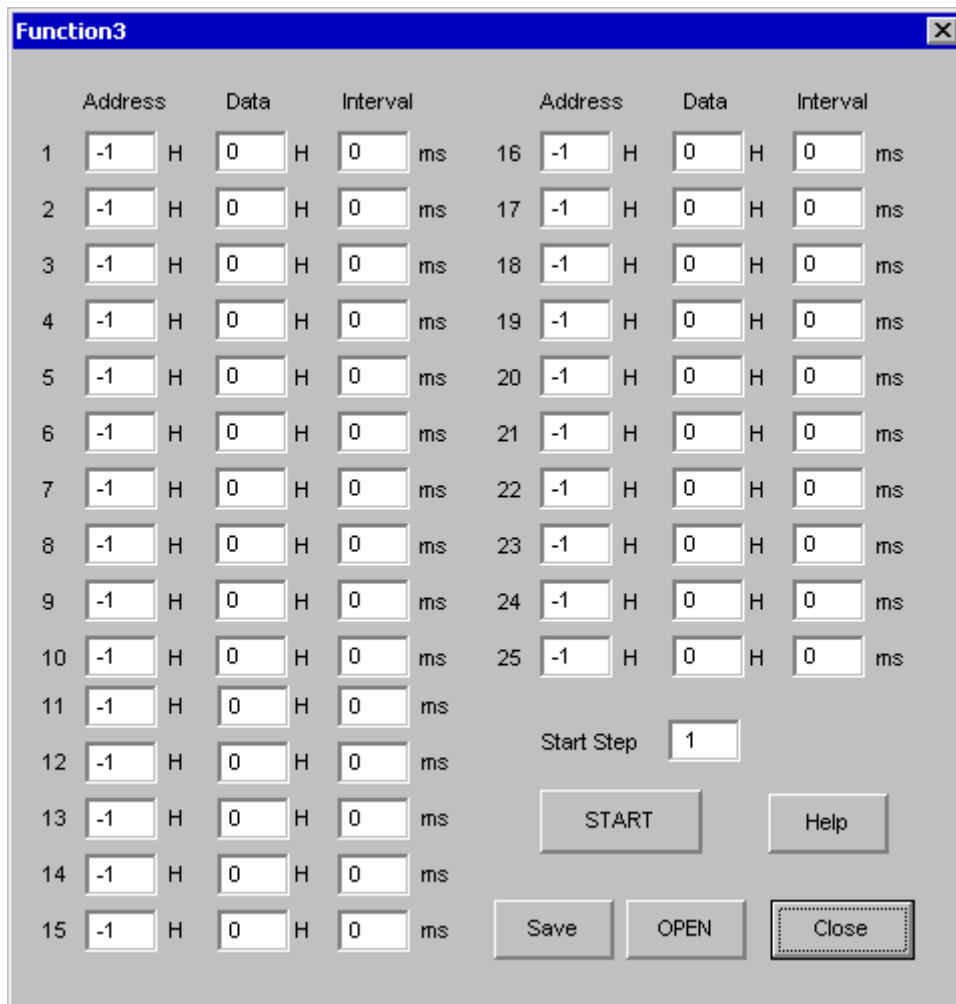


Figure 9. [F3] Window

## 6. [Function4 Dialog]

The sequence file (\*.aks) saved by [Function3] can be listed up to 10 files, assigned to buttons and then executed. When [F4] button is clicked, the window as shown in Figure 10 opens.

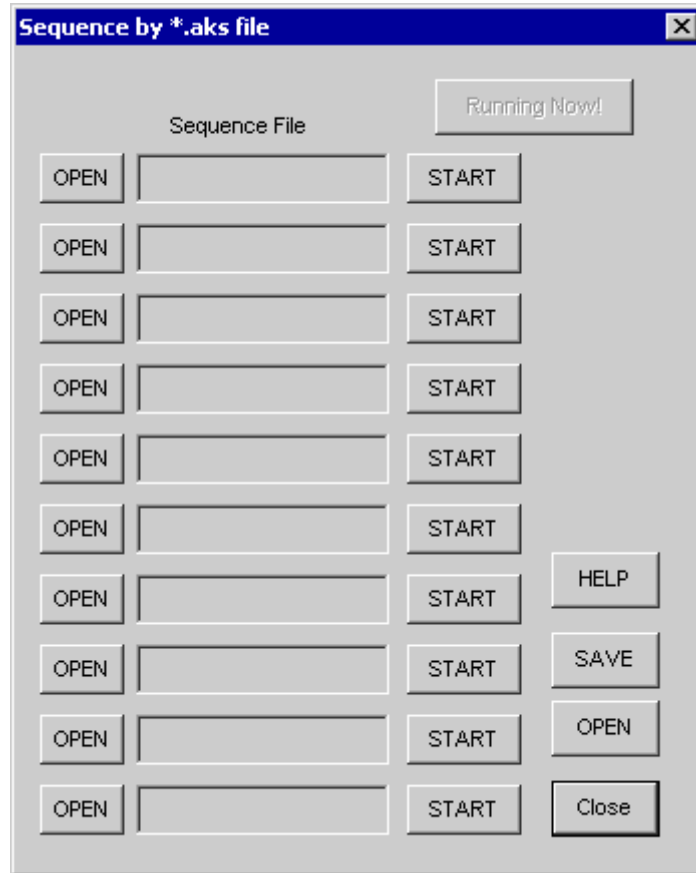


Figure 10. [F4] window

6-1. [OPEN] buttons on left side and [START] buttons

(1) Click [OPEN] button and select the sequence file (\*.aks) saved by [Function3].

The sequence file name is displayed as shown in Figure 11.

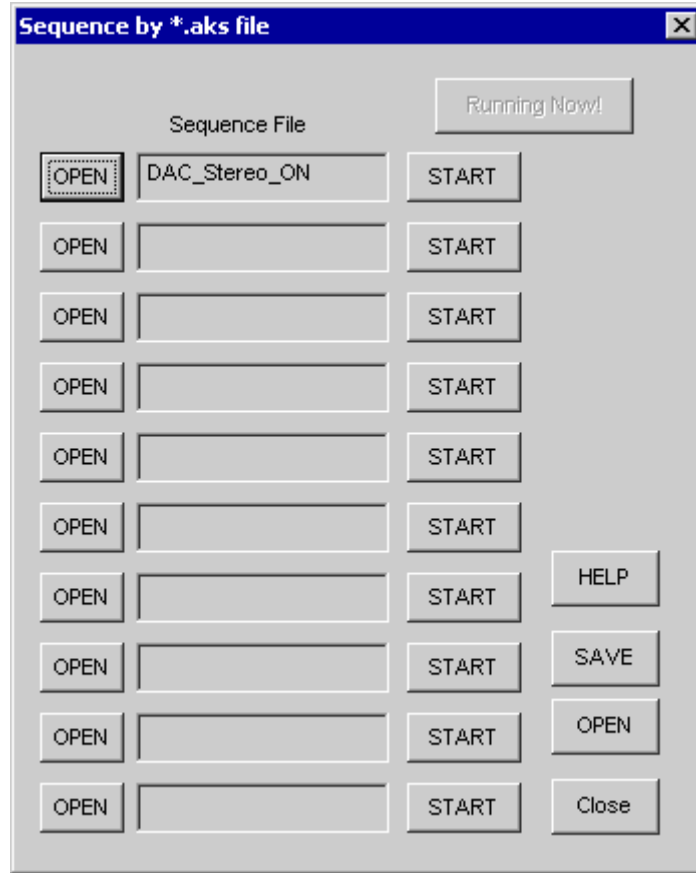


Figure 11. [F4] window (2)

(2) Click [START] button, then the sequence is executed.

6-2. [SAVE] and [OPEN] buttons on right side

[SAVE] : The name assign of sequence file displayed on [Function4] window can be saved to the file. The file name is “\*.ak4”.

[OPEN] : The name assign of sequence file(\*.ak4) saved by [SAVE] is loaded.

6-3. Note

- (1) This function doesn't support the pause function of sequence function.
- (2) All files used by [SAVE] and [OPEN] function on right side need to be in the same folder.
- (3) When the sequence is changed in [Function3], the sequence file (\*.aks) should be loaded again in order to reflect the change.

## 7. [Function5 Dialog]

The register setting file(\*.akr) saved by [SAVE] function on main window can be listed up to 10 files, assigned to buttons and then executed. When [F5] button is clicked, the window as shown in Figure 12 opens.

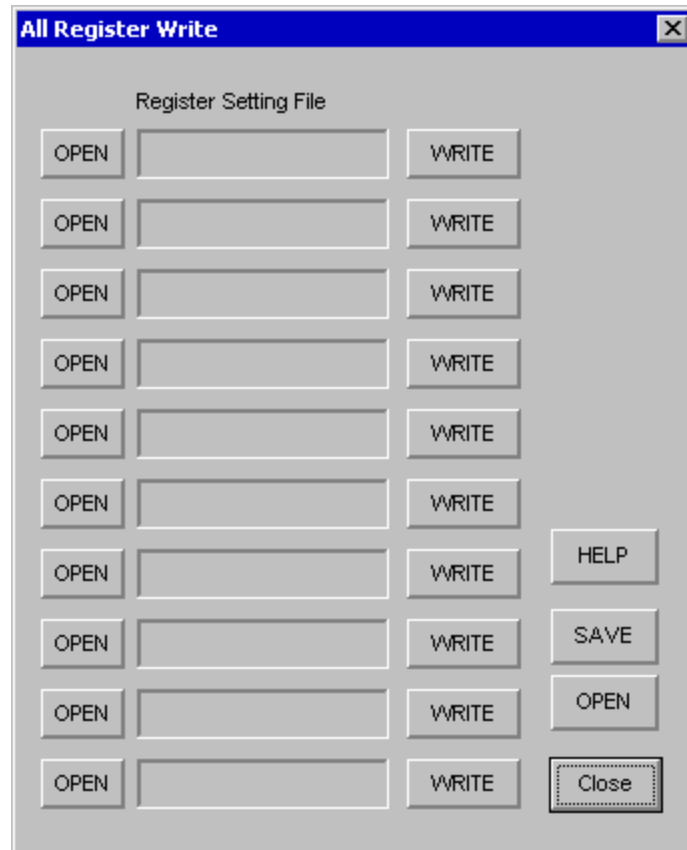


Figure 12. [F5] window

### 7-1. [OPEN] buttons on left side and [WRITE] button

(1) Click [OPEN] button and select the register setting file (\*.akr).

The register setting file name is displayed as shown in Figure 13.

(2) Click [WRITE] button, then the register setting is executed.

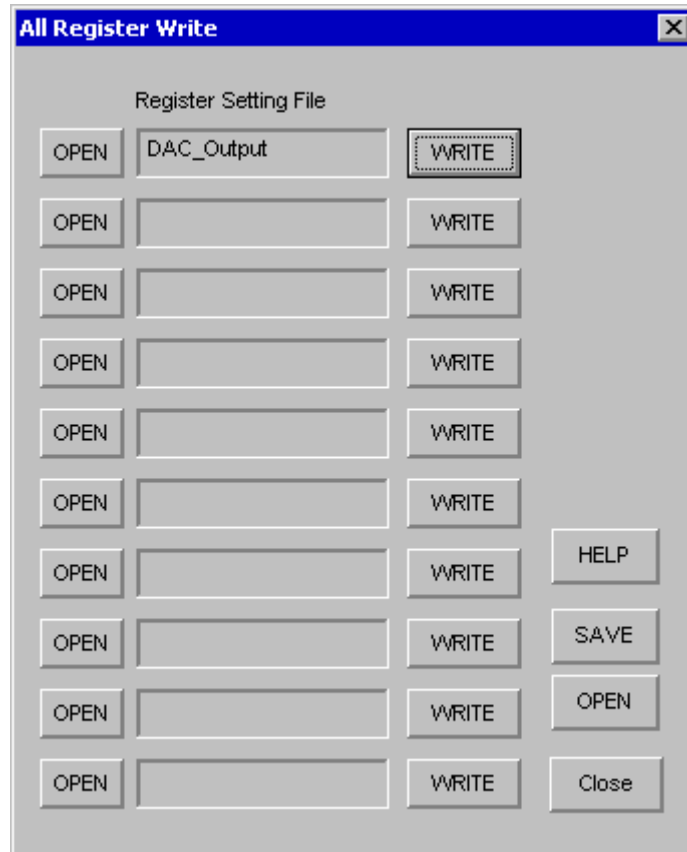


Figure 13. [F5] window (2)

#### 7-2. [SAVE] and [OPEN] buttons on right side

[SAVE] : The name assign of register setting file displayed on [Function5] window can be saved to the file. The file name is “\*.ak5”.

[OPEN] : The name assign of register setting file(\*.ak5) saved by [SAVE] is loaded.

#### 7-3. Note

- (1) All files used by [SAVE] and [OPEN] function on right side need to be in the same folder.
- (2) When the register setting is changed by [SAVE] Button on the main window, the register setting file (\*.akr) should be loaded again in order to reflect the change.

## 8. [Filter Dialog]

A calculation of a coefficient of Digital Programmable Filter such as HPF,EQ filter ,a write to a register and check frequency response such as HPF,EQ filter.

Window to show to Figure 14 opens when push a [Filter] button .

Figure14. [Filter] Window

### 8-1. Setting of a parameter

(1) Please set a parameter of each Filter.

| Item                   | Contents                           | Setting range  |
|------------------------|------------------------------------|--|
| Sampling Rate          | Sampling frequency (fs)            | $7350\text{Hz} \leq f_s \leq 48000\text{Hz}$         |
| HPF                    |                                    |  |
| Cut Off Frequency      | High pass filter cut off frequency | $f_c/f_s \geq 0.0001$ ( $f_c$ min = 1.6Hz at 16kHz)  |
| LPF                    |                                    |  |
| Cut Off Frequency      | Low pass filter cut off frequency  | $f_c/f_s \geq 0.05$ ( $f_c$ min = 2205Hz at 44.1kHz) |
| 5 Band Equalizer       |                                    |  |
| EQ1-5 Center Frequency | EQ1-5 Center Frequency             | $f_{o_n} / f_s < 0.497$                              |
| EQ1-5 Band Width       | EQ1-5 Band Width (Note 1)          |  |
| EQ1-5 Gain             | EQ1-5 Gain (Note 2)                | $-1 \leq K_n < 3$                                    |

Note 1. A gain difference is a bandwidth of 3dB from center frequency.

Note 2. When a gain is smaller than 0 , EQ becomes a notch filter.

- (2) “LPF”, “HPF”, “HPFAD”, “EQ1”, “EQ2”, “EQ3”, “EQ4”, “EQ5” Please set ON/OFF of Filter with a check button. When checked it, Filter becomes ON. When checked “Notch Filter Auto Correction”, perform automatic revision of center frequency of a notch filter. (“Cf. 8-4. automatic revision of center frequency of a notch filter”)

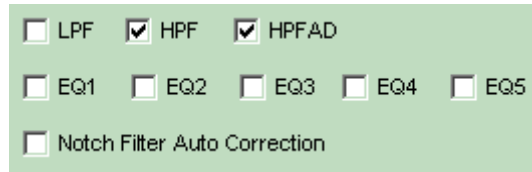


Figure14. Filter ON/OFF setting button

### 8-2. A calculation of a register

A register set value is displayed when push a [Register Setting] button. When a value out of a setting range is set, error message is displayed, and, a calculation of register setting is not carried out.

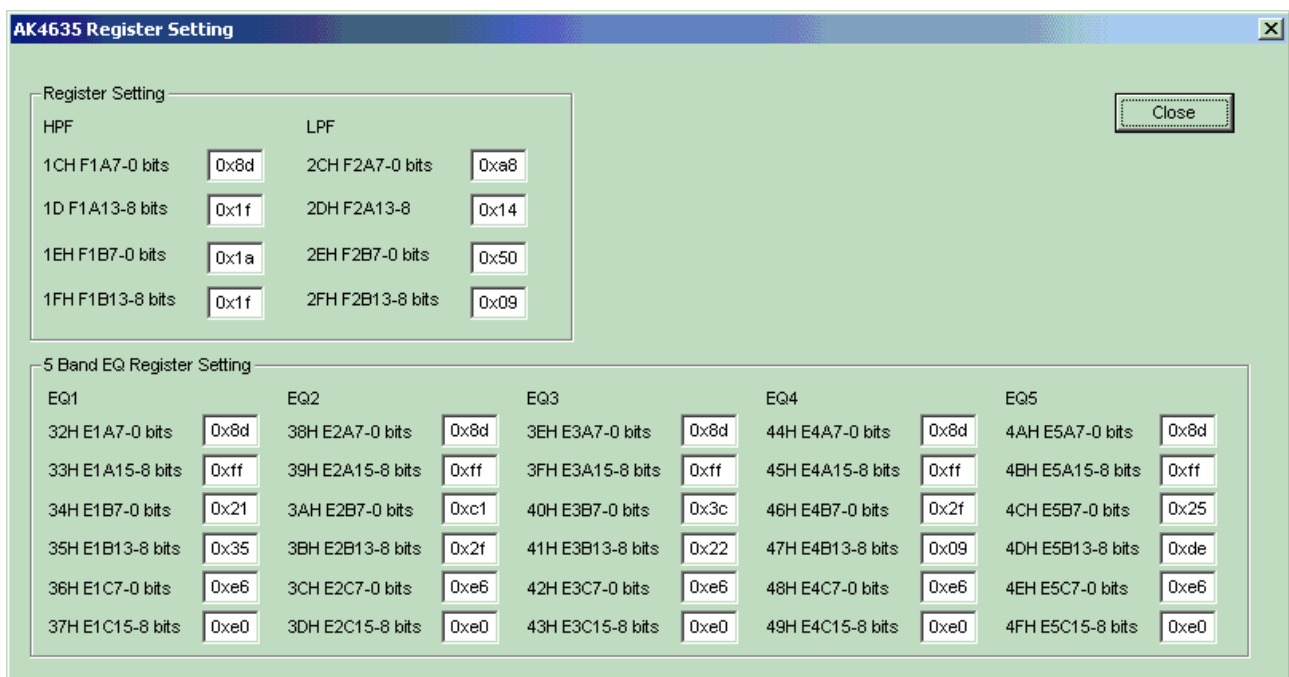


Figure15. A register setting calculation result

When it is as follows that a register set value is updated.

- (1) When [Register Setting] button was pushed.
- (2) When [Frequency Response] button was pushed.
- (3) When [UpDate] button was pushed on a frequency characteristic indication window.
- (4) When set ON/OFF of a check button “Notch Filter Auto Correction”

### 8-3. Indication of a frequency characteristic

A frequency characteristic is displayed when push a [Frequency Response] button. In addition, a register set point is updated then, too.

Change "Frequency Range", and indication of a frequency characteristic is updated when push a [UpDate] button.

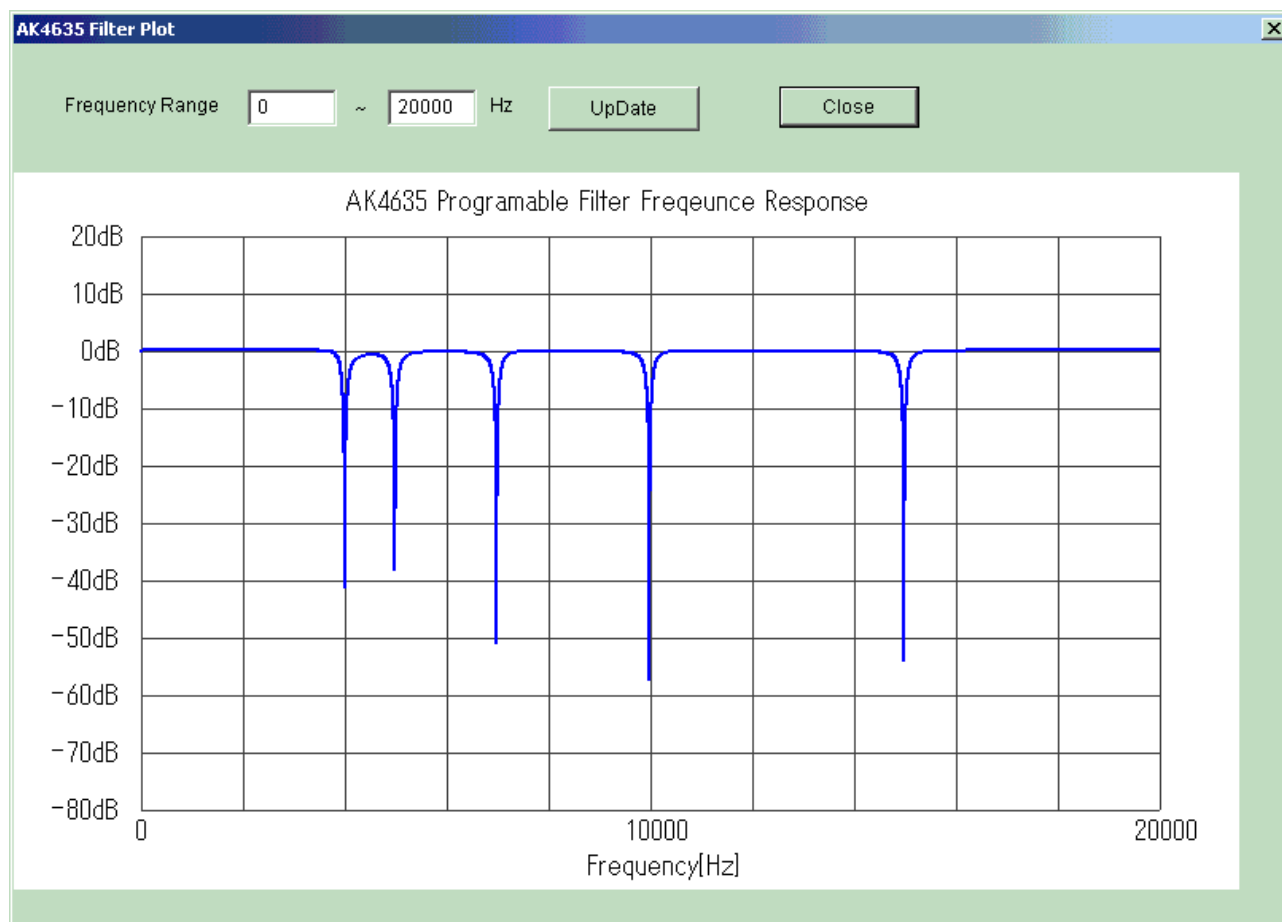


Figure16. A frequency characteristic indication result

When it is as follows that a register set point is updated.

- (1) When [Register Setting] button was pushed.
- (2) When [Frequency Response] button was pushed.
- (3) When [UpDate] button was pushed on a frequency characteristic indication window.
- (4) When set ON/OFF of a check button "Notch Filter Auto Correction"

### 8-4. Automatic revision of center frequency of a notch filter

When set a gain of 5 band Equalizer to -1, Equalizer becomes a notch filter. When center frequency of plural notch filters is adjacent, produce a gap to central frequency (Figure 17). When check "a Notch Filter Auto Correction" button, perform automatic revision of central frequency of a notch filter, display register setting after automatic revision and a frequency characteristic (Figure 18). This automatic revision is availability for Equalizer Band which set a gain to "-1".

(Note) When distance among center frequency is smaller than band width, there is a possibility that automatic revision is not performed definitely. Please confirm a revision result by indication of a frequency characteristic.

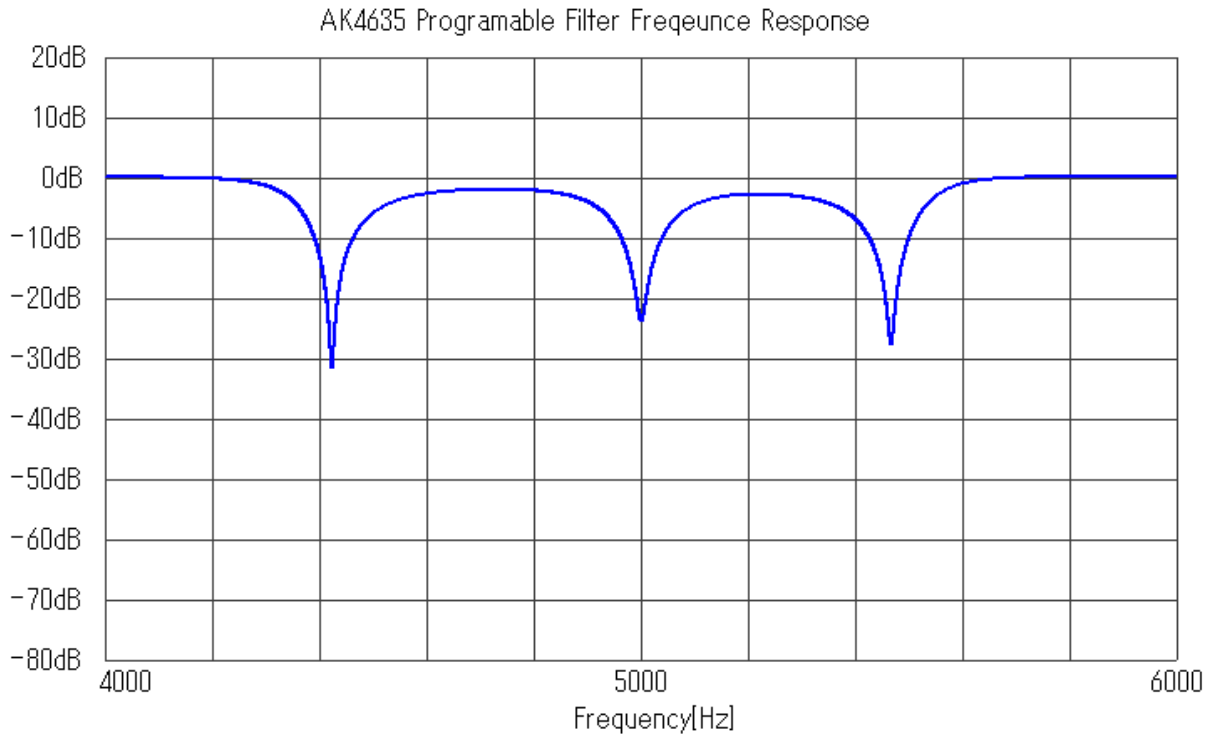


Figure17. When there is no revision of center frequency

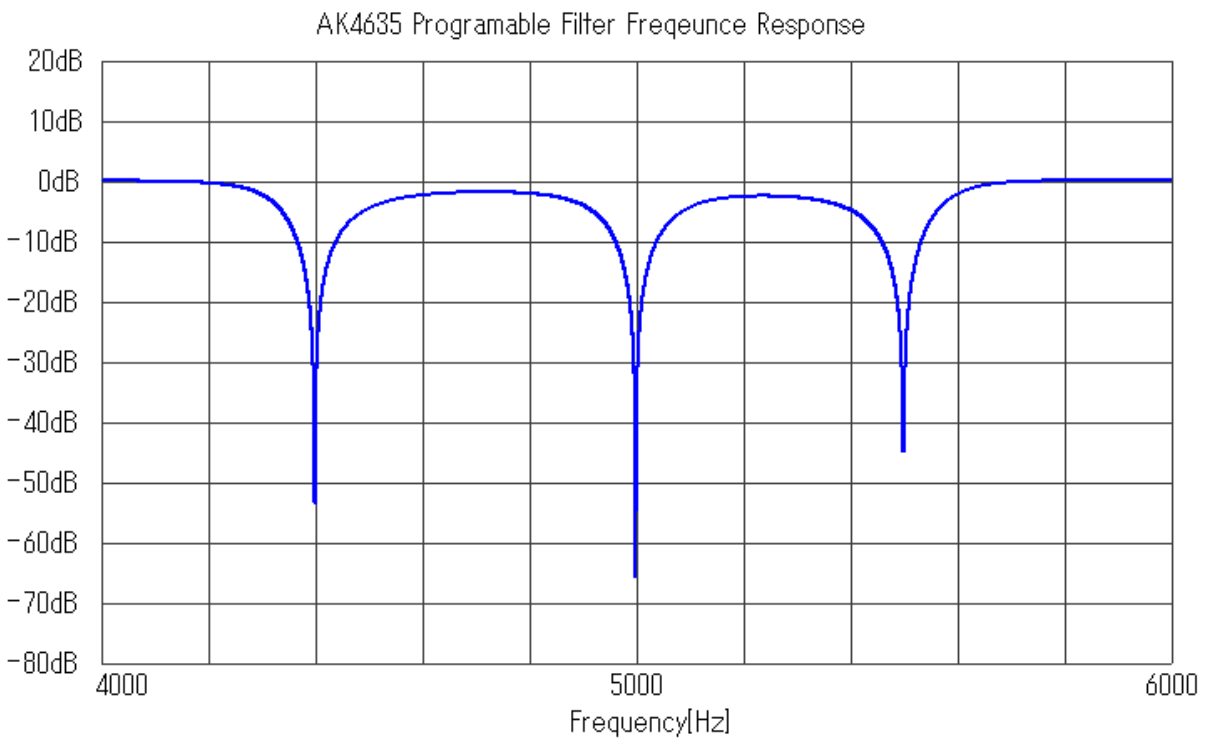



Figure18. When there is revision of center frequency

**Revision History**












| Date     | Manual Revision | Board Revision | Reason              | Contents              |
|----------|-----------------|----------------|---------------------|-----------------------|
| 07/01/22 | KM086600        | 0              | First Edition       |                       |
| 07/04/17 | KM086601        | 1              | Device Rev. changed | AK4635: Rev.A → Rev.B |

— IMPORTANT NOTICE —





- These products and their specifications are subject to change without notice.  
When you consider any use or application of these products, please make inquiries the sales office of Asahi Kasei EMD Corporation (AKEMD) or authorized distributors as to current status of the products.
- AKEMD assumes no liability for infringement of any patent, intellectual property, or other rights in the application or use of any information contained herein.
- Any export of these products, or devices or systems containing them, may require an export license or other official approval under the law and regulations of the country of export pertaining to customs and tariffs, currency exchange, or strategic materials.
- AKEMD products are neither intended nor authorized for use as critical components<sup>Note1</sup> in any safety, life support, or other hazard related device or system<sup>Note2</sup>, and AKEMD assumes no responsibility for such use, except for the use approved with the express written consent by Representative Director of AKEMD. As used here:
  - Note1) A critical component is one whose failure to function or perform may reasonably be expected to result, whether directly or indirectly, in the loss of the safety or effectiveness of the device or system containing it, and which must therefore meet very high standards of performance and reliability.
  - Note2) A hazard related device or system is one designed or intended for life support or maintenance of safety or for applications in medicine, aerospace, nuclear energy, or other fields, in which its failure to function or perform may reasonably be expected to result in loss of life or in significant injury or damage to person or property.
- It is the responsibility of the buyer or distributor of AKEMD products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the above content and conditions, and the buyer or distributor agrees to assume any and all responsibility and liability for and hold AKEMD harmless from any and all claims arising from the use of said product in the absence of such notification.

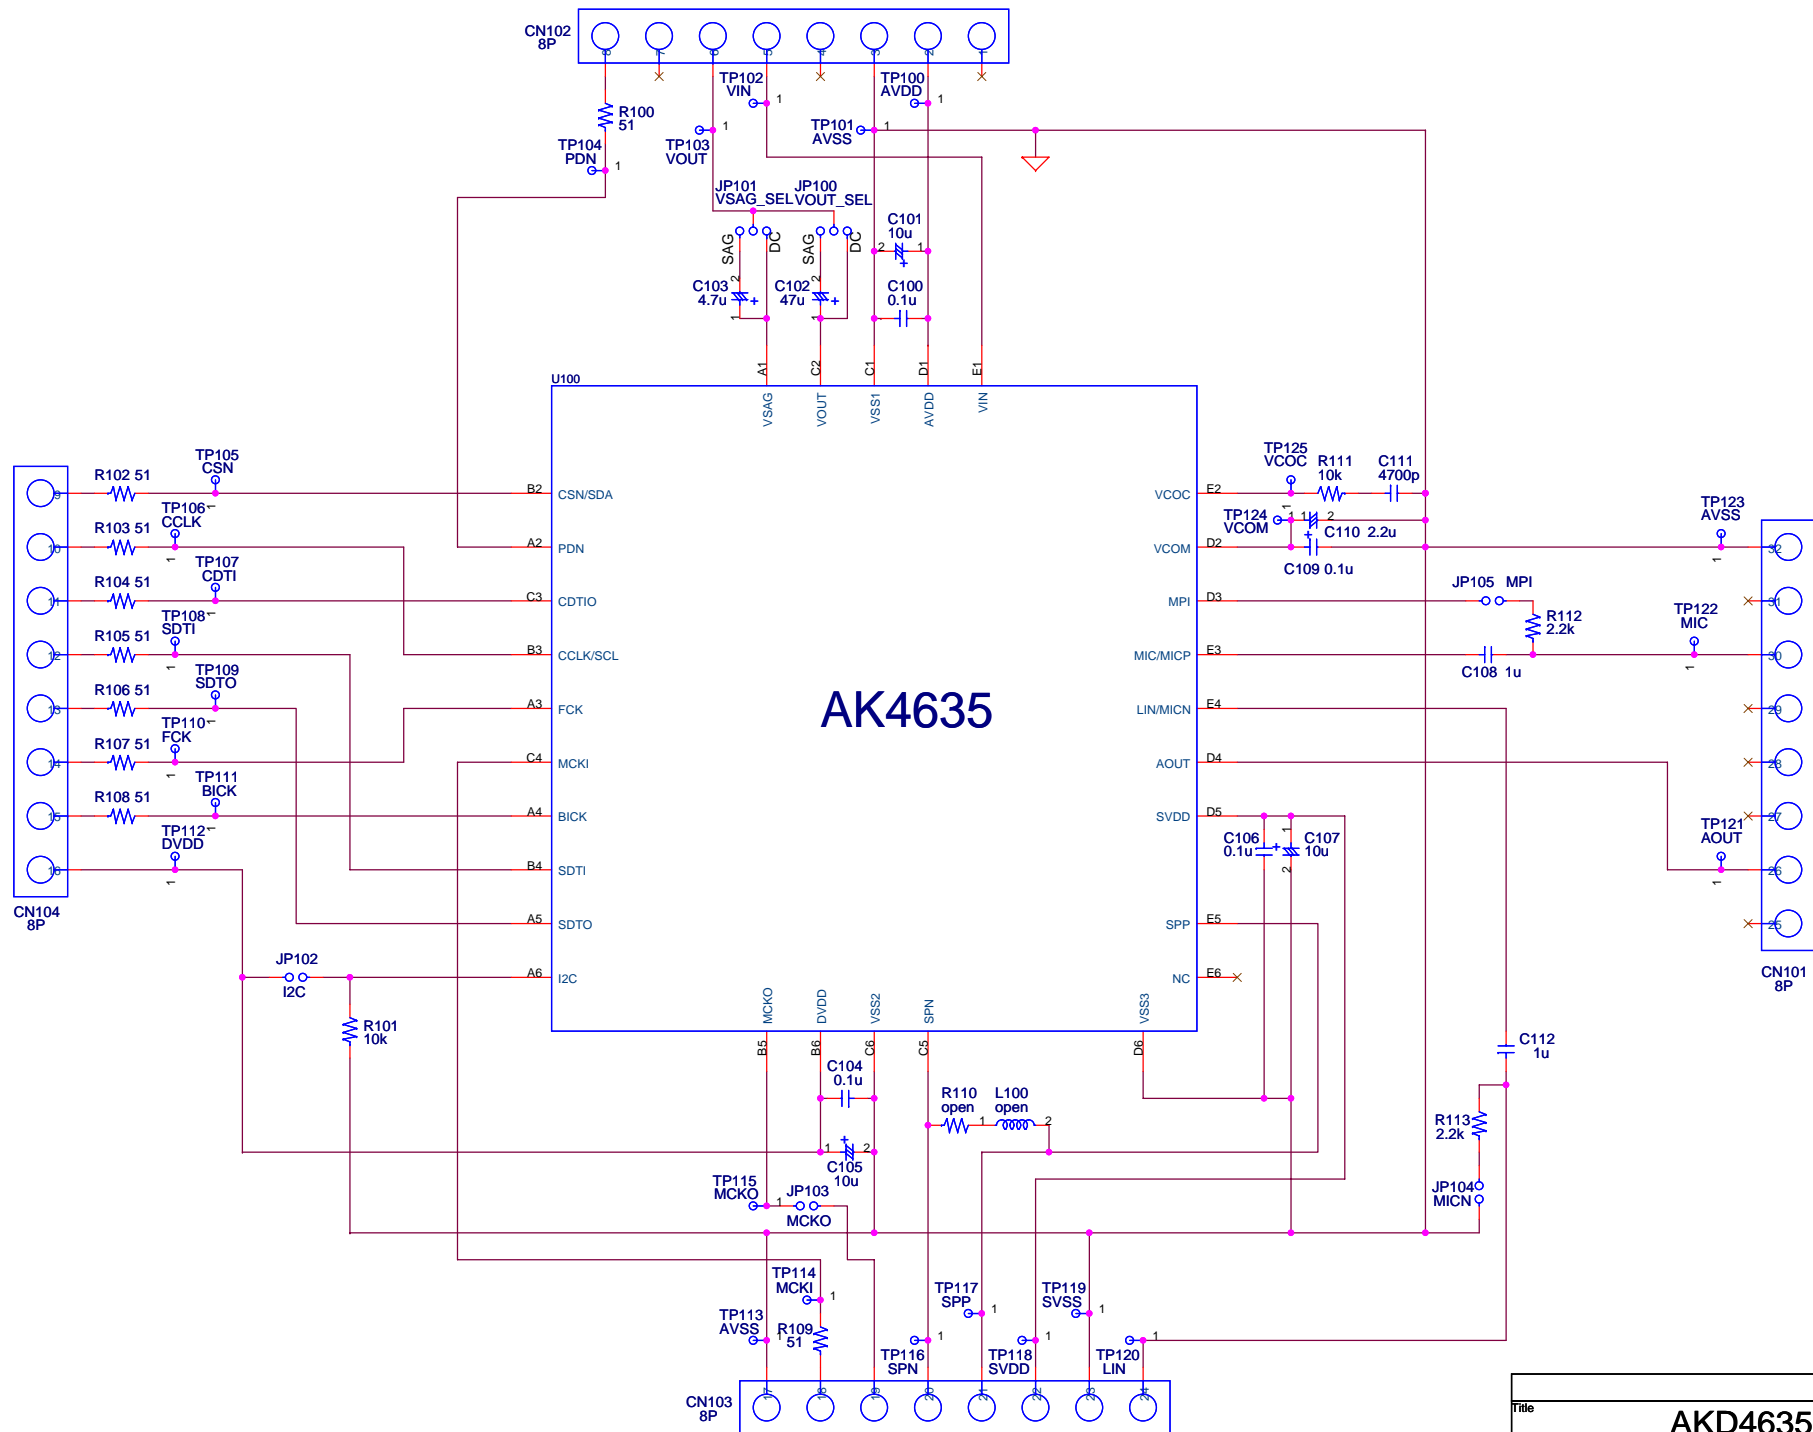

|       |                             |       |           |    |     |
|-------|-----------------------------|-------|-----------|----|-----|
| Title |                             |       | AKD4635-A |    |     |
| Size  | Document Number             |       |           |    | Rev |
| A3    | AK4635_SUB_29CSP            |       |           |    | 0   |
| Date: | Thursday, December 21, 2006 | Sheet | 1         | of | 1   |

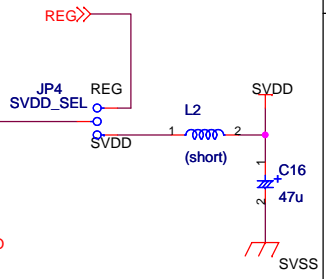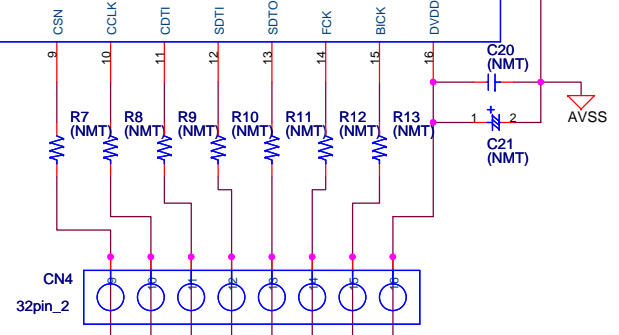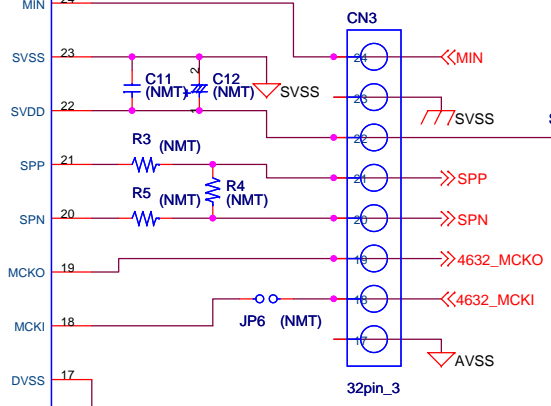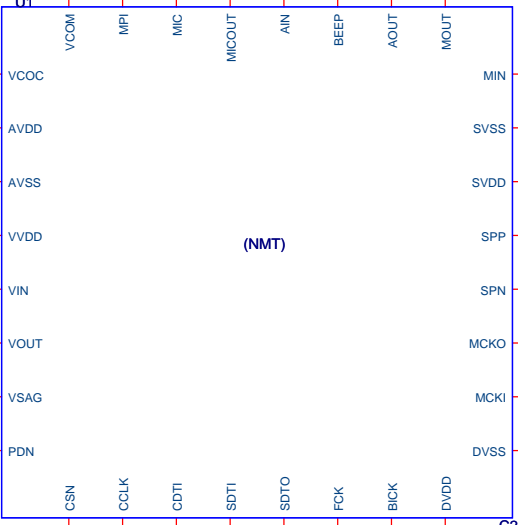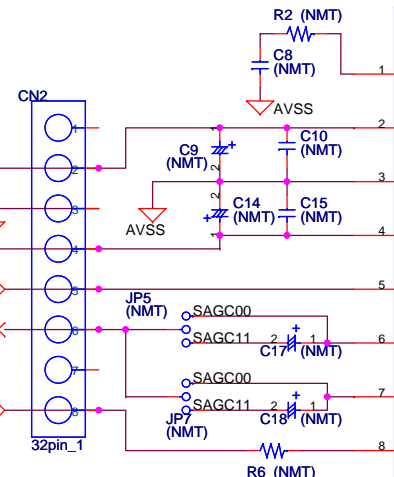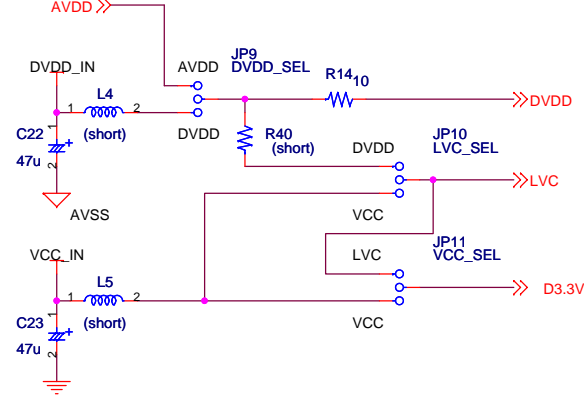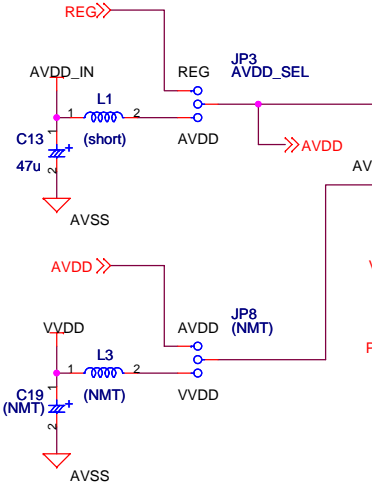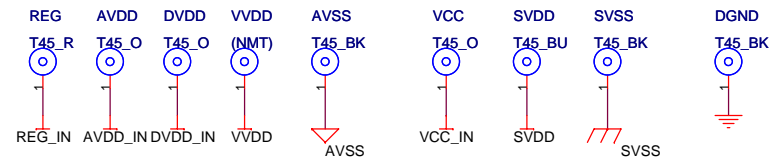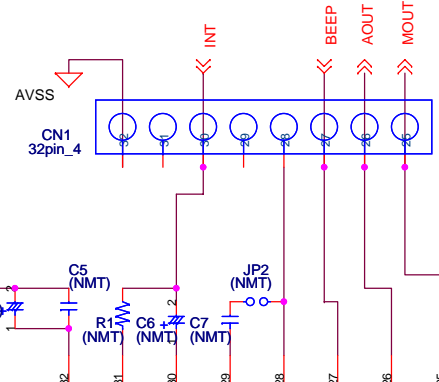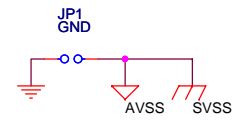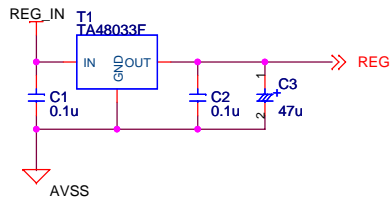


|       |                             |       |           |    |     |
|-------|-----------------------------|-------|-----------|----|-----|
| Title |                             |       | AKD4635-A |    |     |
| Size  | Document Number             |       |           |    | Rev |
| A3    | AK4635                      |       |           |    | 0   |
| Date: | Thursday, December 21, 2006 | Sheet | 1         | of | 5   |

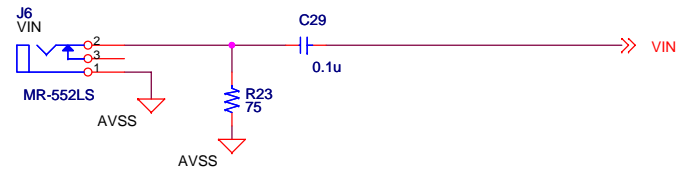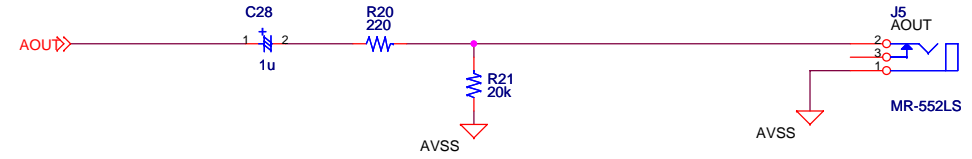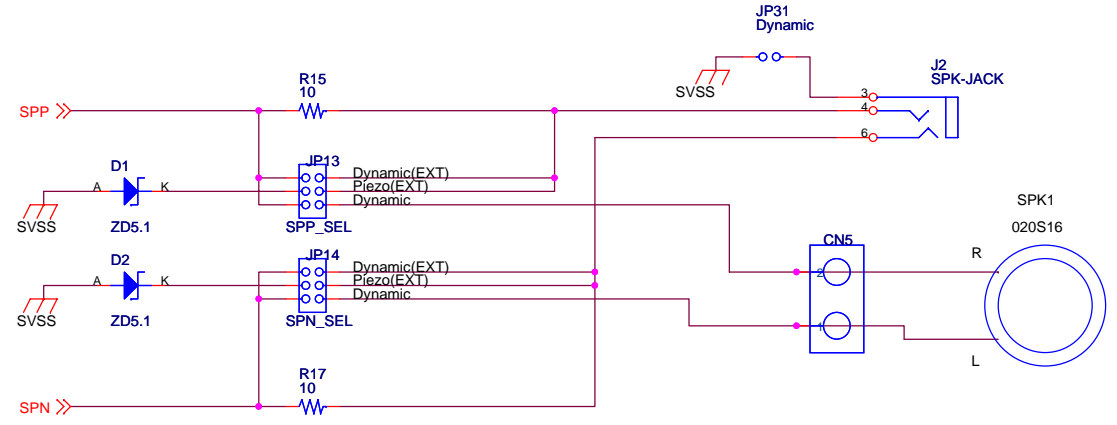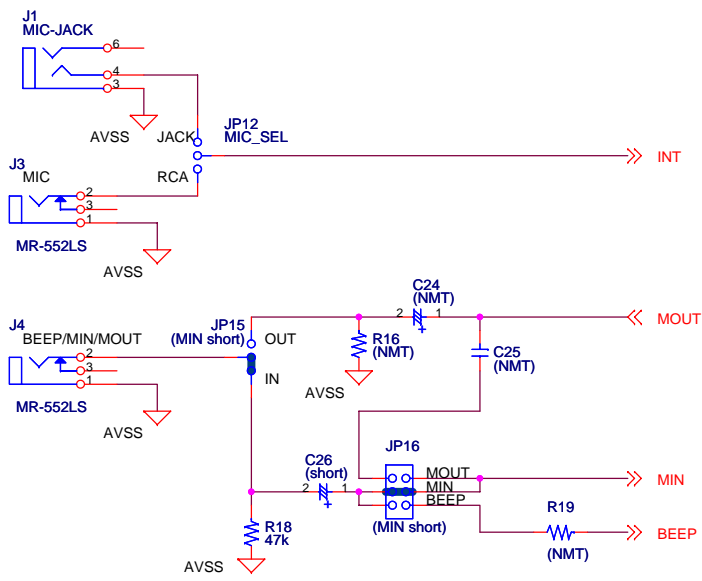


|                  |                           |       |        |
|------------------|---------------------------|-------|--------|
| Title            |                           |       |        |
| <b>AKD4635-A</b> |                           |       |        |
| Size             | Document Number           | Rev   |        |
| A3               | Input/Output              | 0     |        |
| Date:            | Monday, December 04, 2006 | Sheet | 2 of 5 |

for  
74HCU04,74AC74,74VHC4040,74HC14,74HC14,74HC541,74HCT04

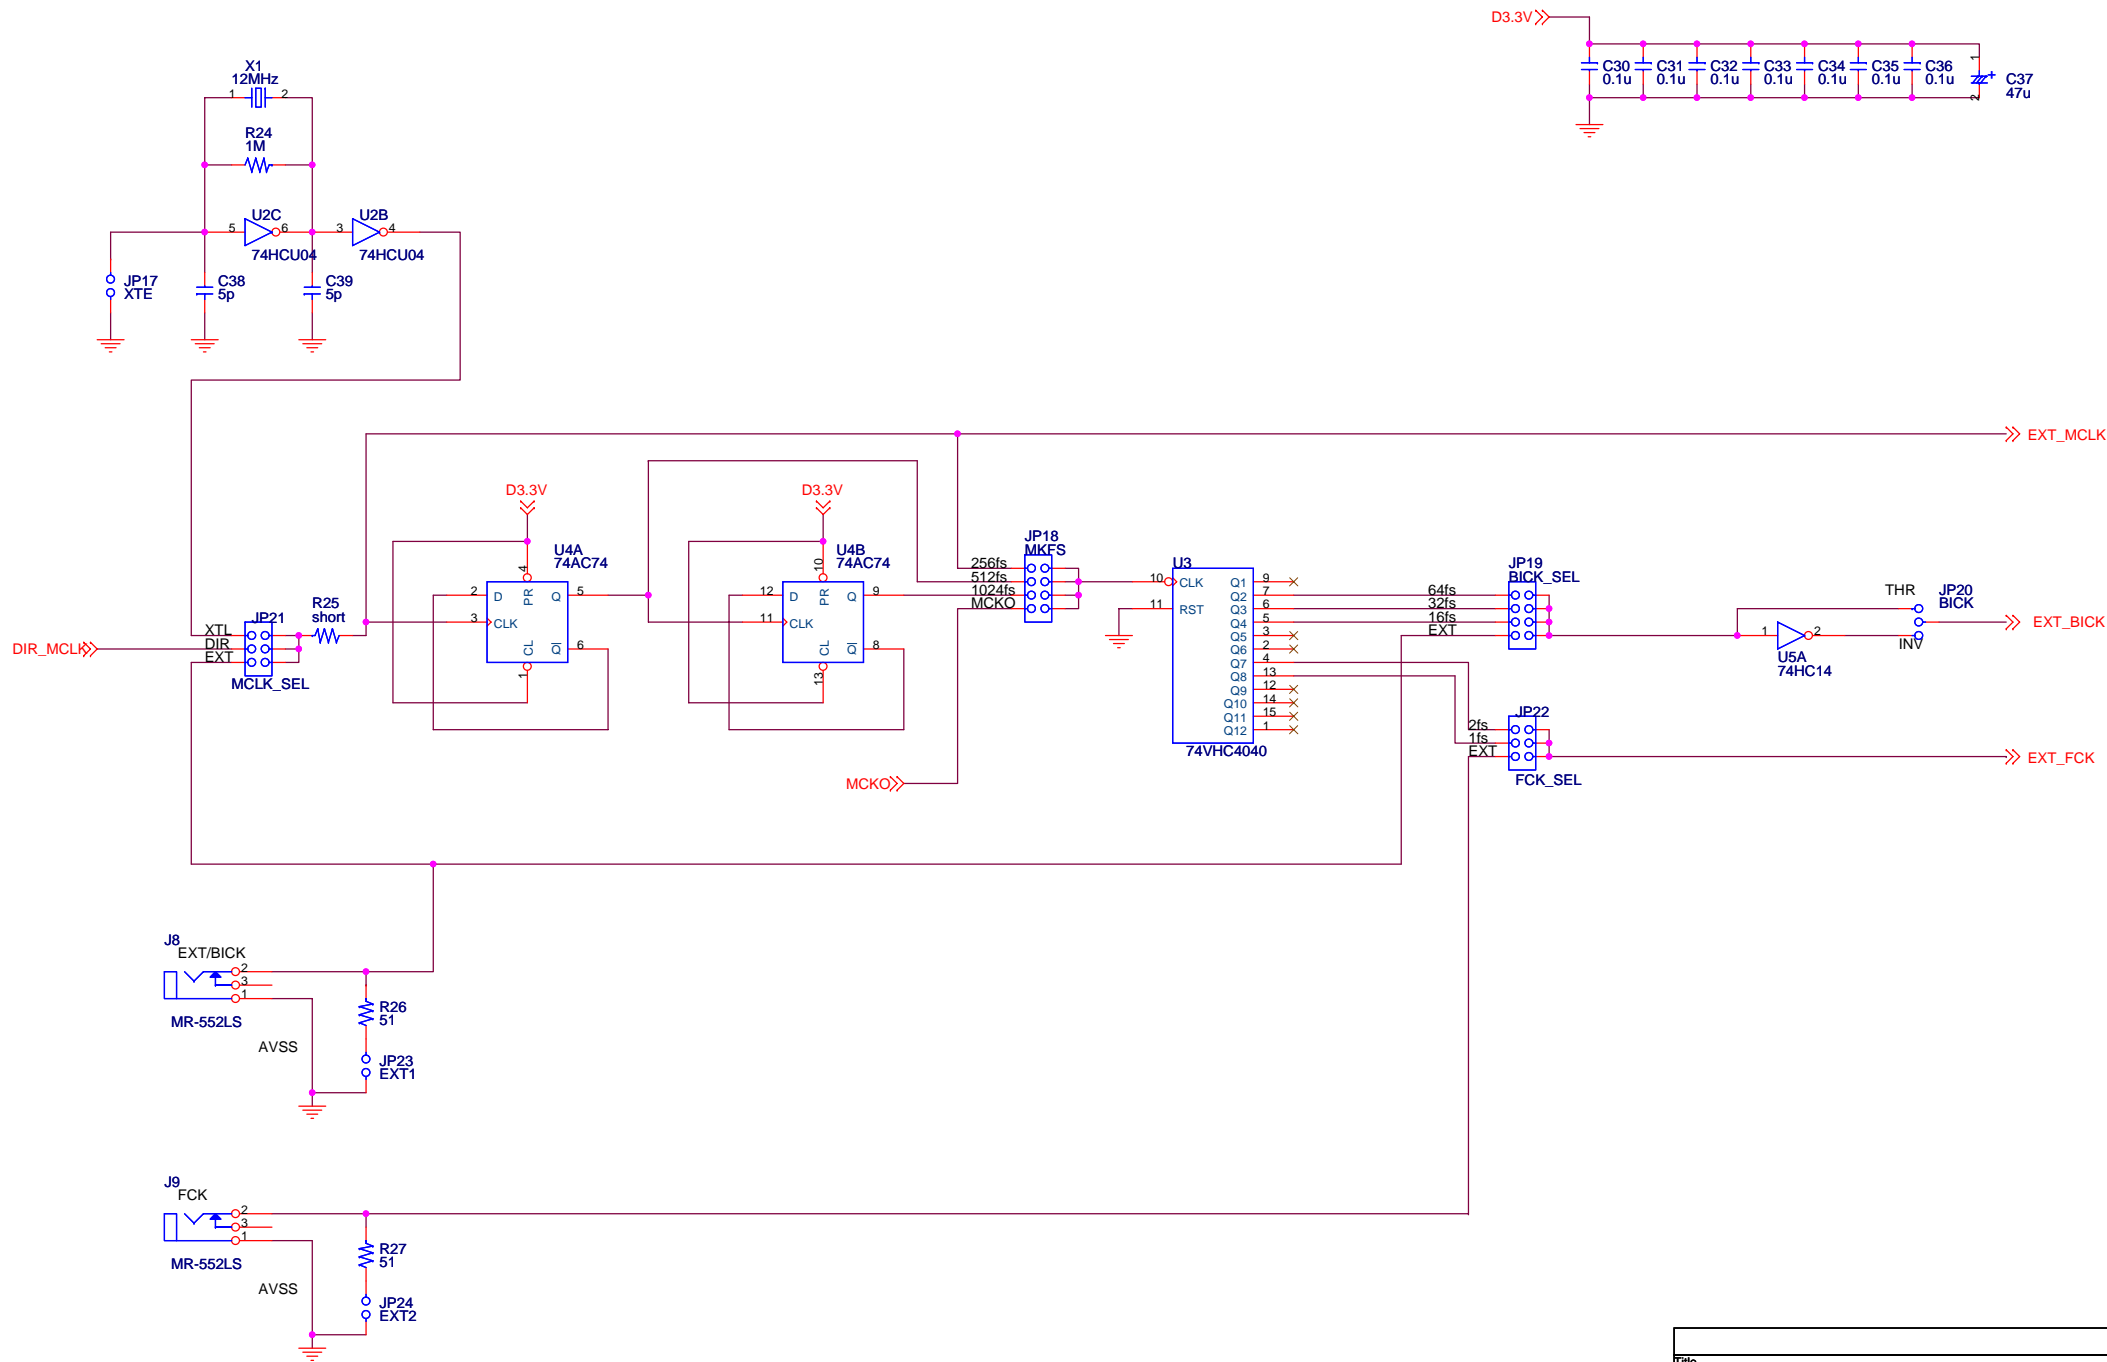


|                                 |                 |     |
|---------------------------------|-----------------|-----|
| Title                           |                 |     |
| AKD4635-A                       |                 |     |
| Size                            | Document Number | Rev |
| A3                              | CLOCK           | 0   |
| Date: Monday, December 04, 2006 |                 |     |
| Sheet                           |                 | of  |
| 3                               |                 | 5   |

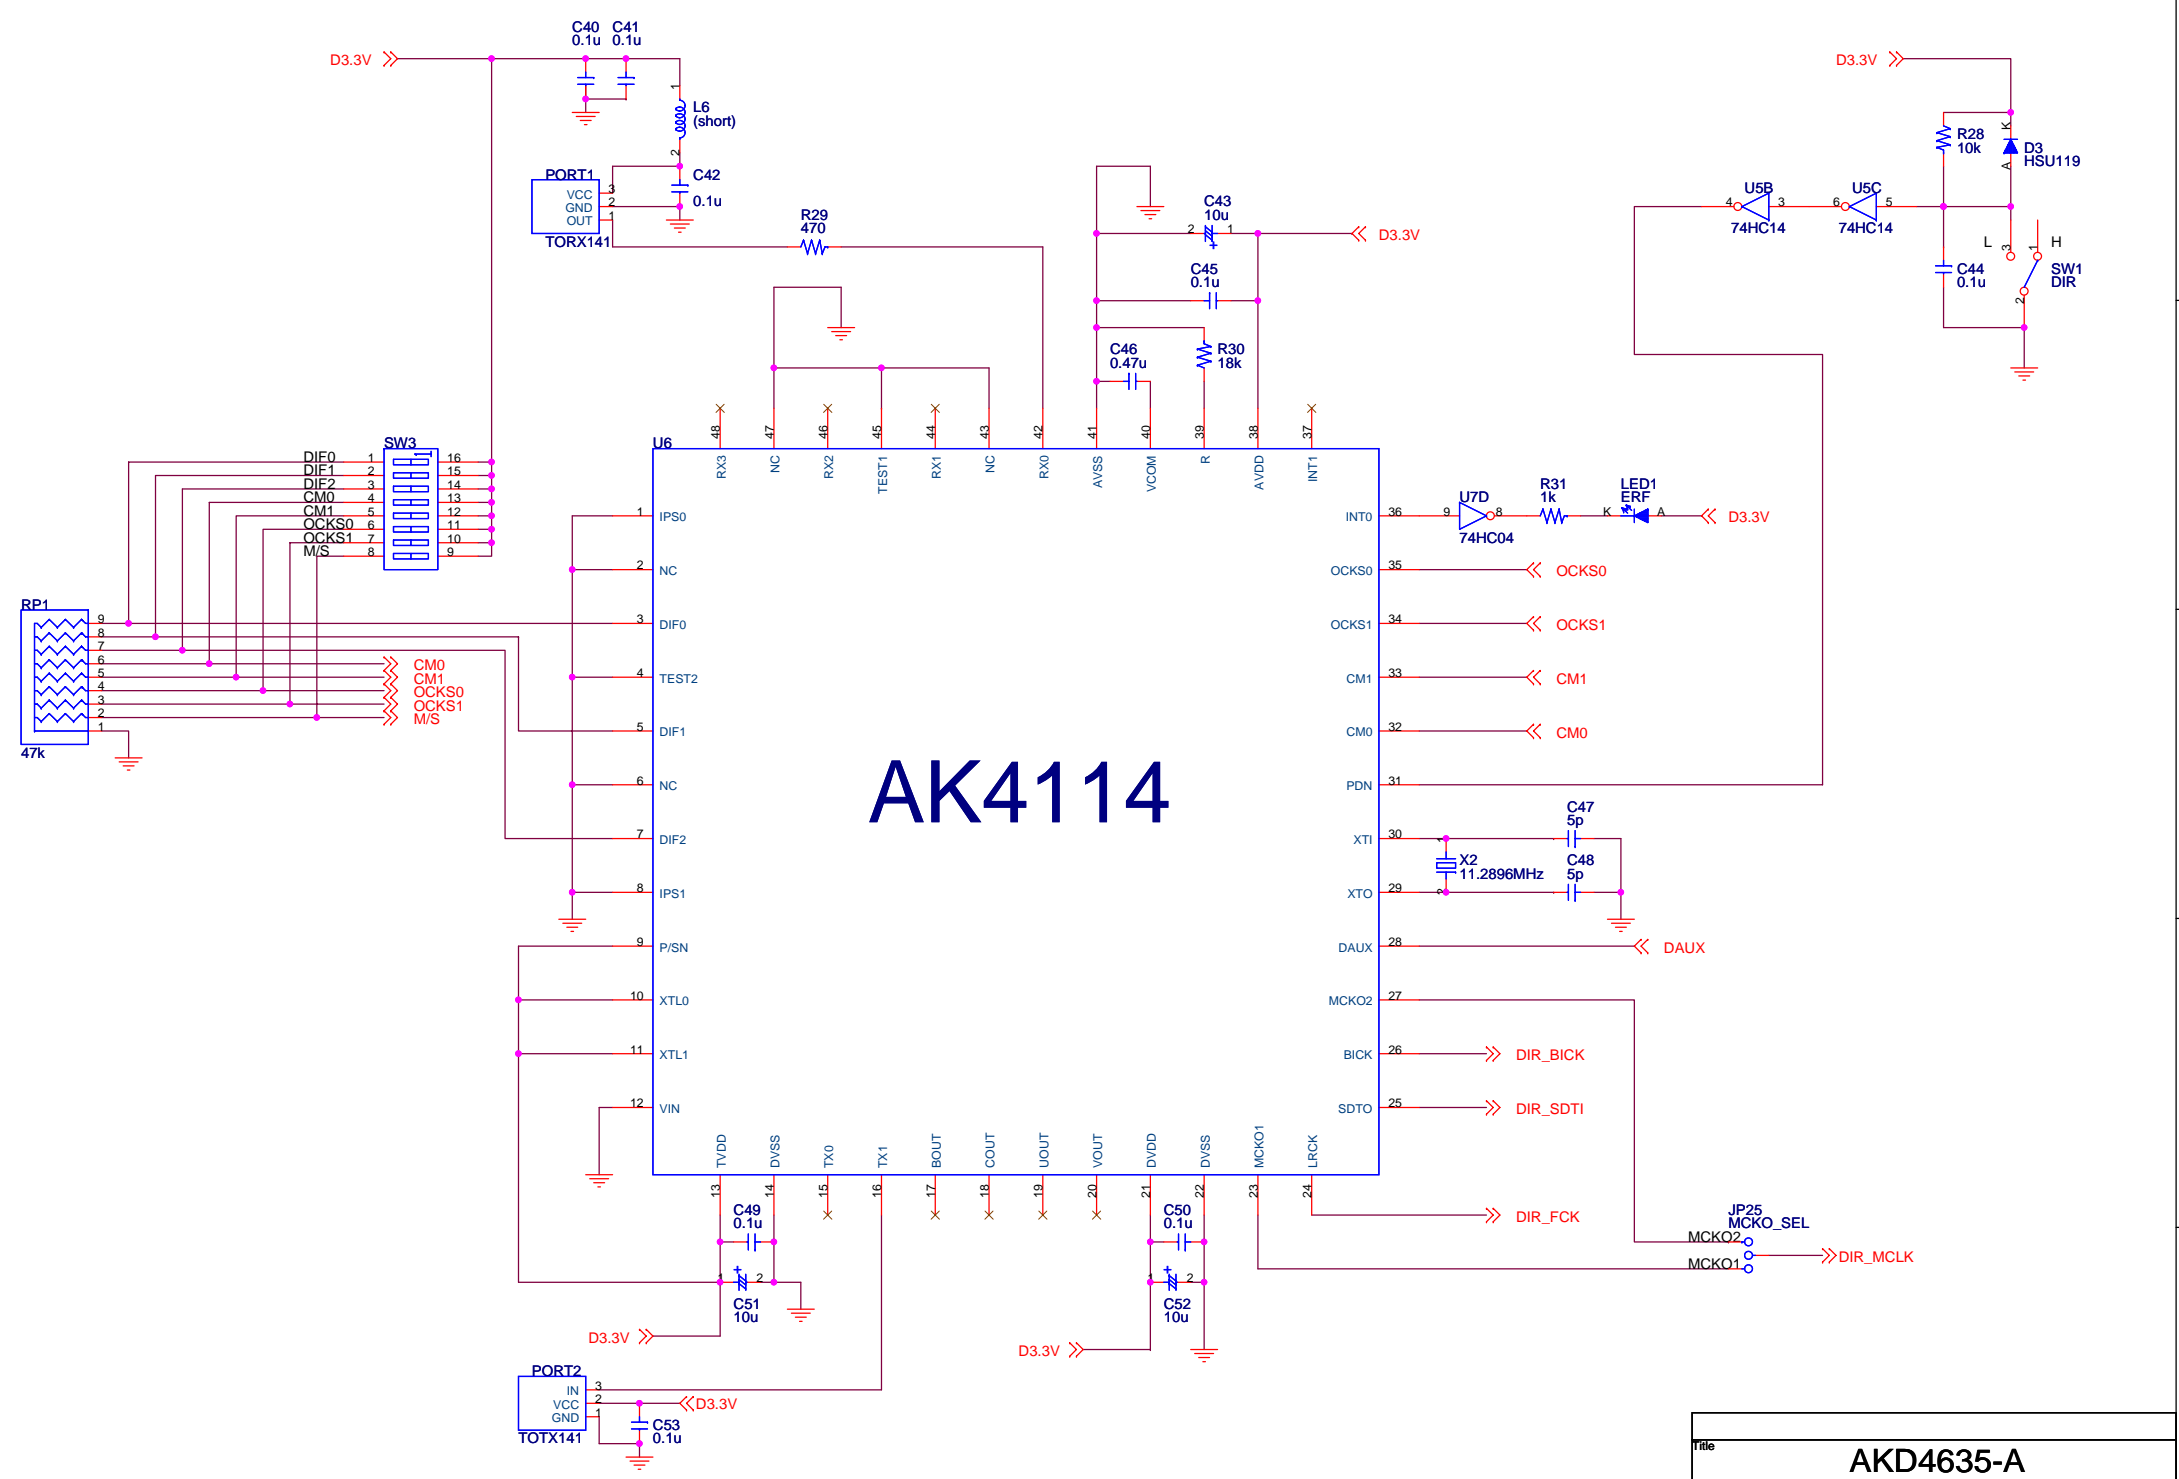


# AK4114


|       |                              |                |                  |
|-------|------------------------------|----------------|------------------|
| Title |                              |                | <b>AKD4635-A</b> |
| Size  | Document Number              | <b>DIR/DIT</b> |                  |
| A3    |                              |                | Rev 0            |
| Date: | Wednesday, November 29, 2006 |                | Sheet 4 of 5     |

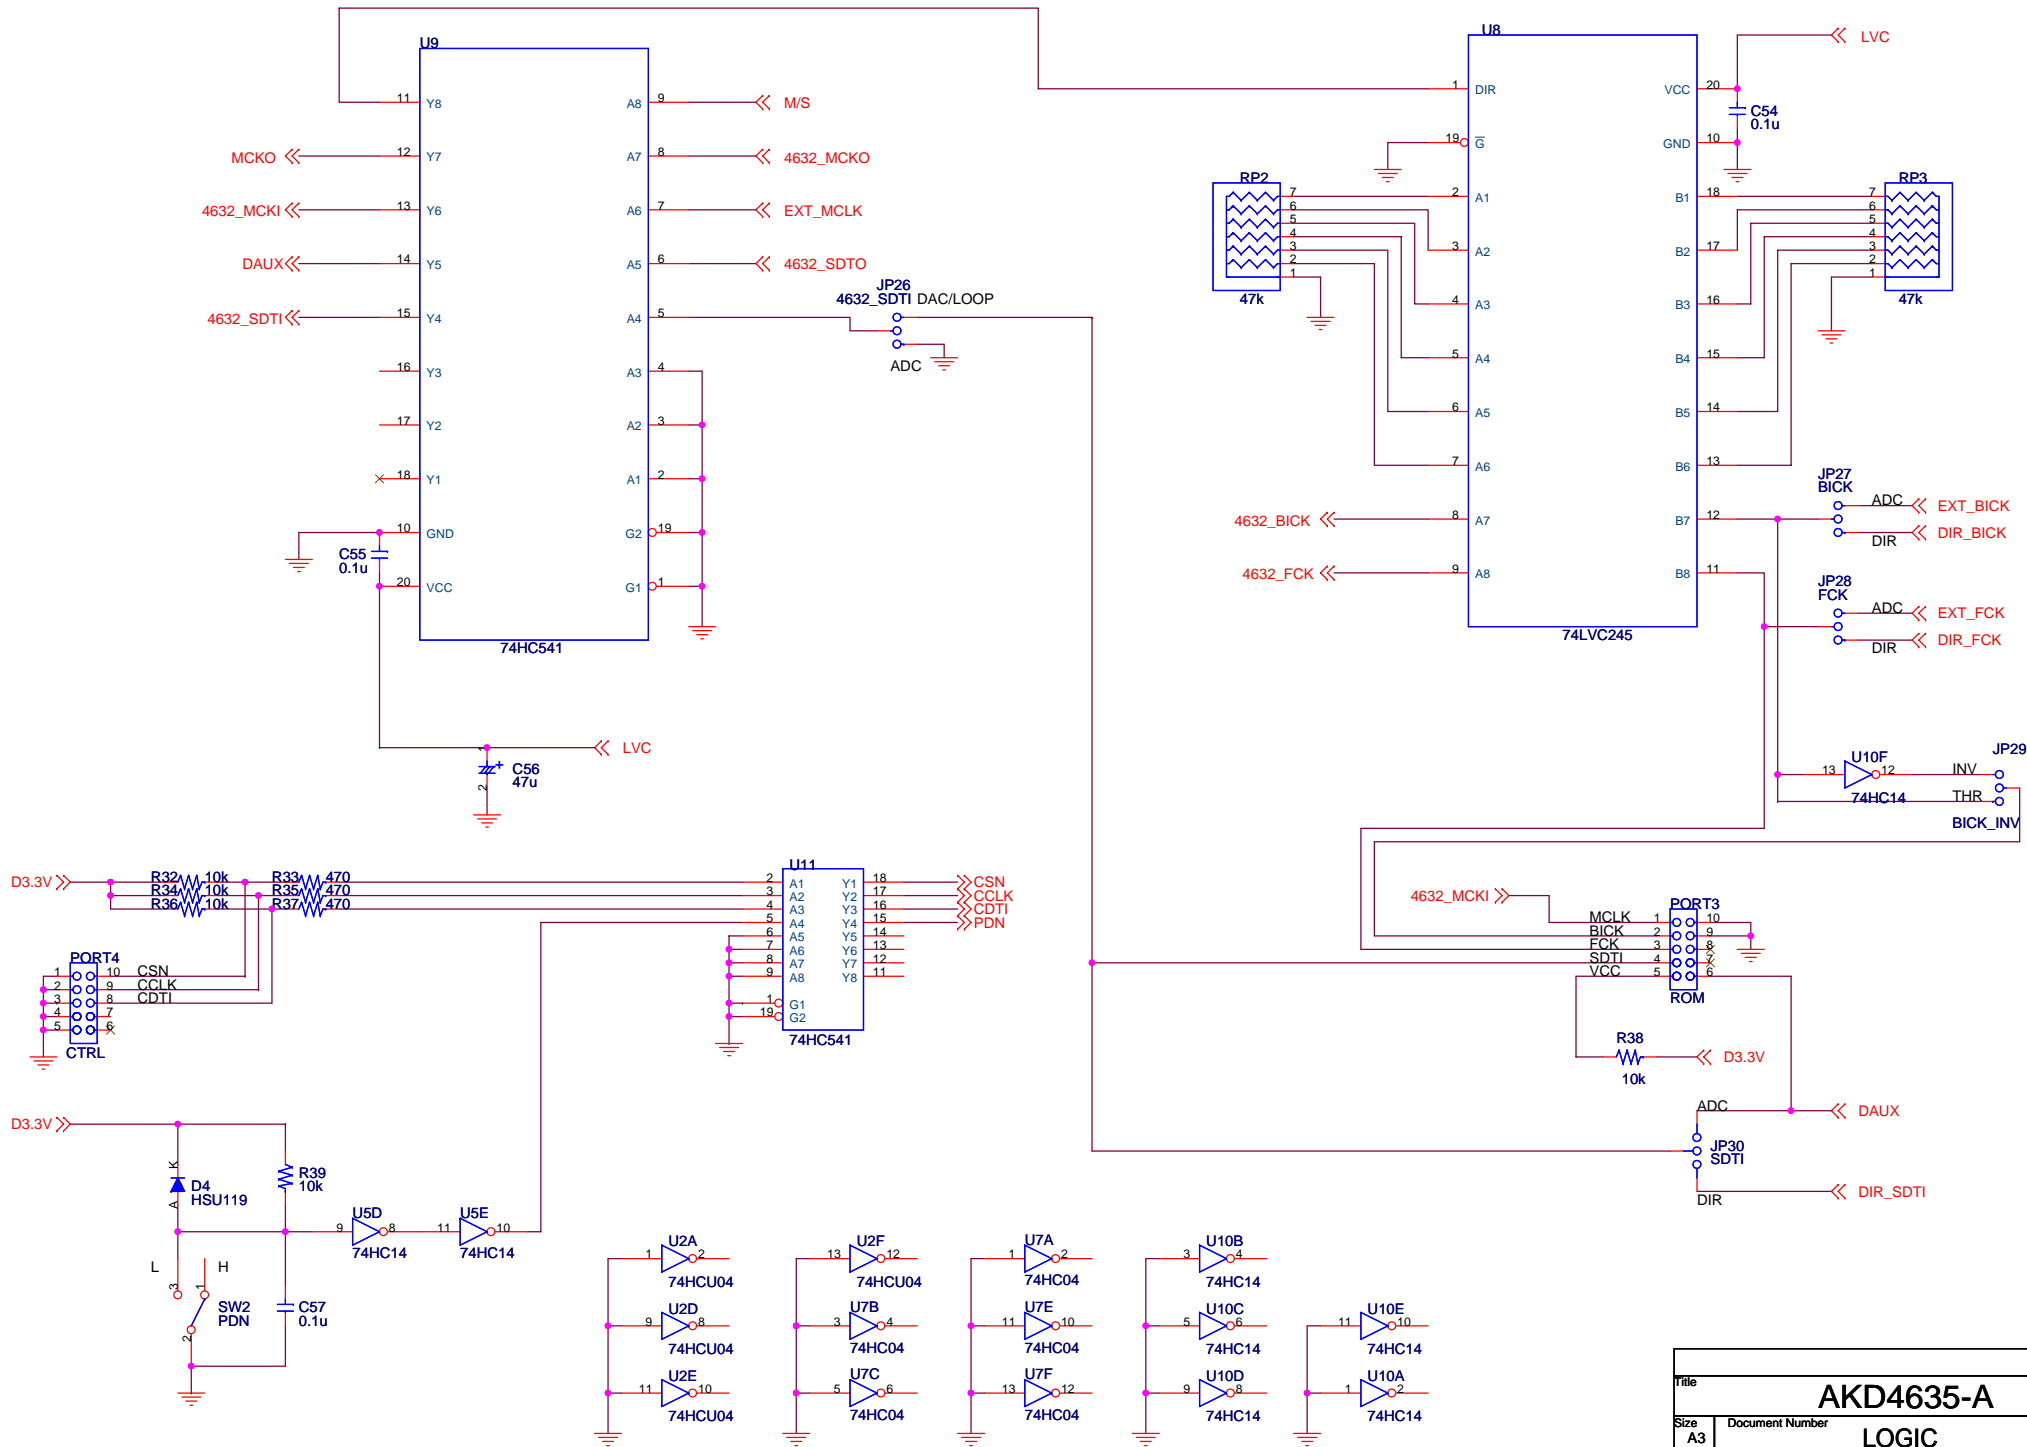


|       |                          |                 |                  |      |
|-------|--------------------------|-----------------|------------------|------|
| Title |                          |                 | <b>AKD4635-A</b> |      |
| Size  | A3                       | Document Number | <b>LOGIC</b>     |      |
| Date: | Monday, January 22, 2007 | Sheet           | 5                | of 5 |
| Rev   | 0                        |                 |                  |      |

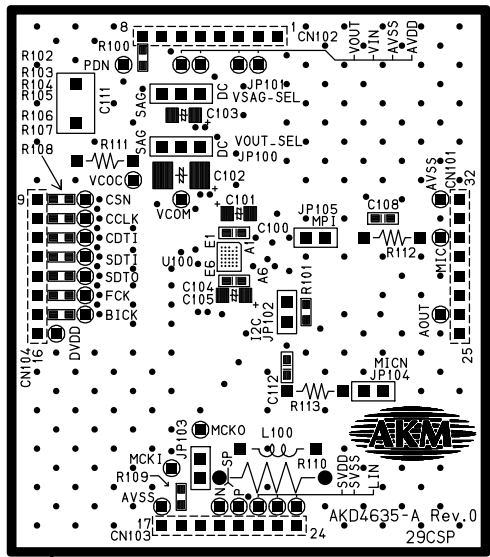


AKD4635-A SUB 29CSP L1 SILK

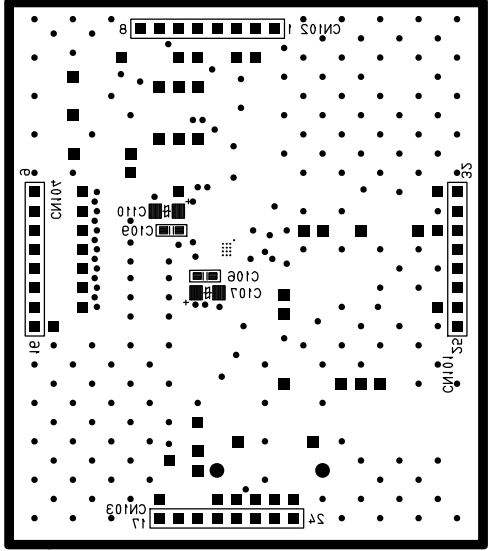


AKDt932-A SUB SAC2P LE 2LTK

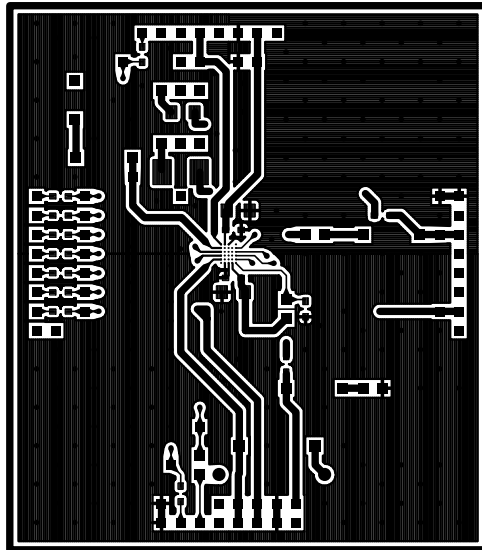


AKD4635-A SUB 29CSP L1

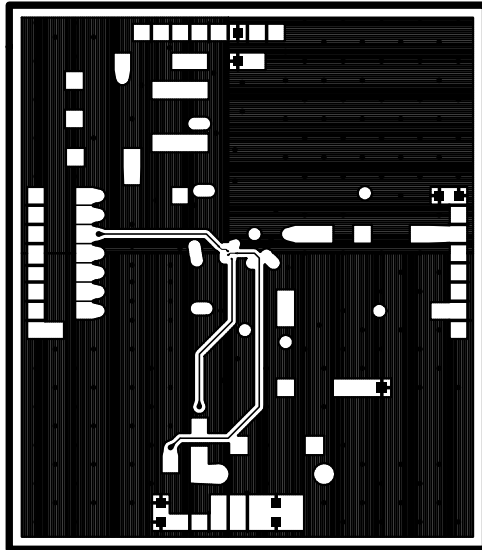


AKD4635-A SUB 29CSP L2

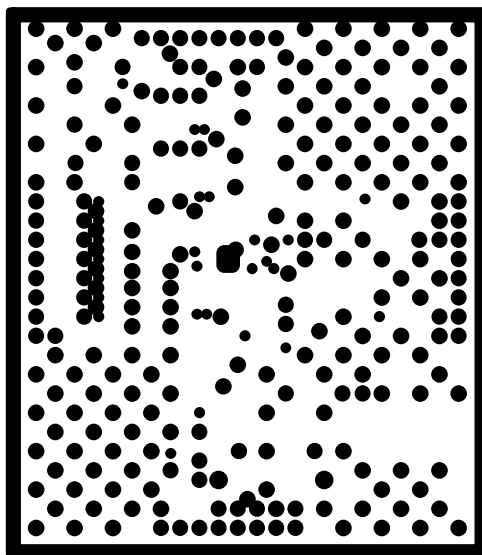


AKD4635-A SUB 29CSP L3

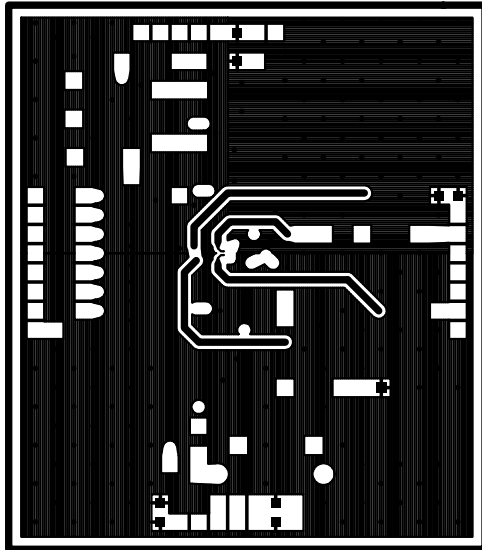


AKD4635-A SUB 29CSP L4

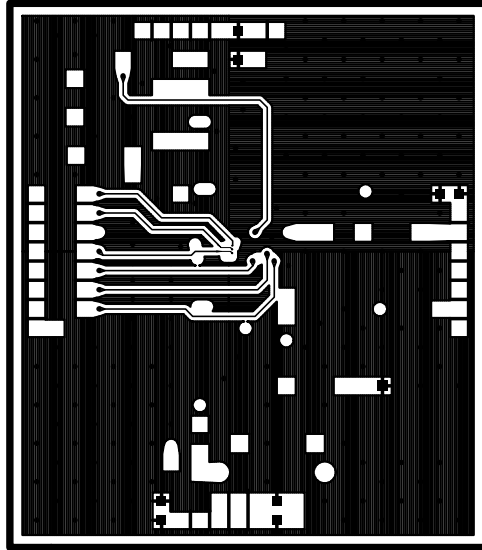


AKD4635-A SUB 29CSP L5

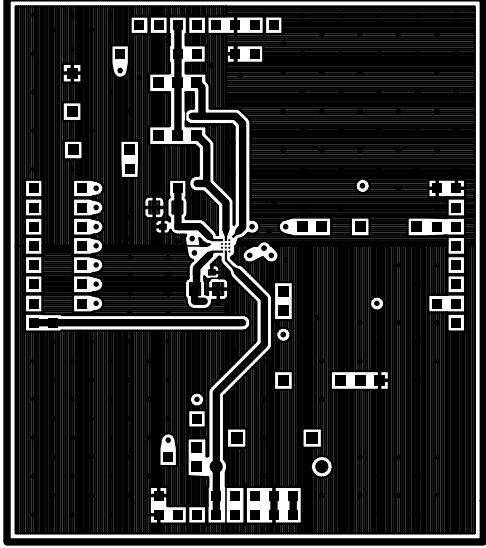

AKD4e32-A 2NB 3aC2b LE

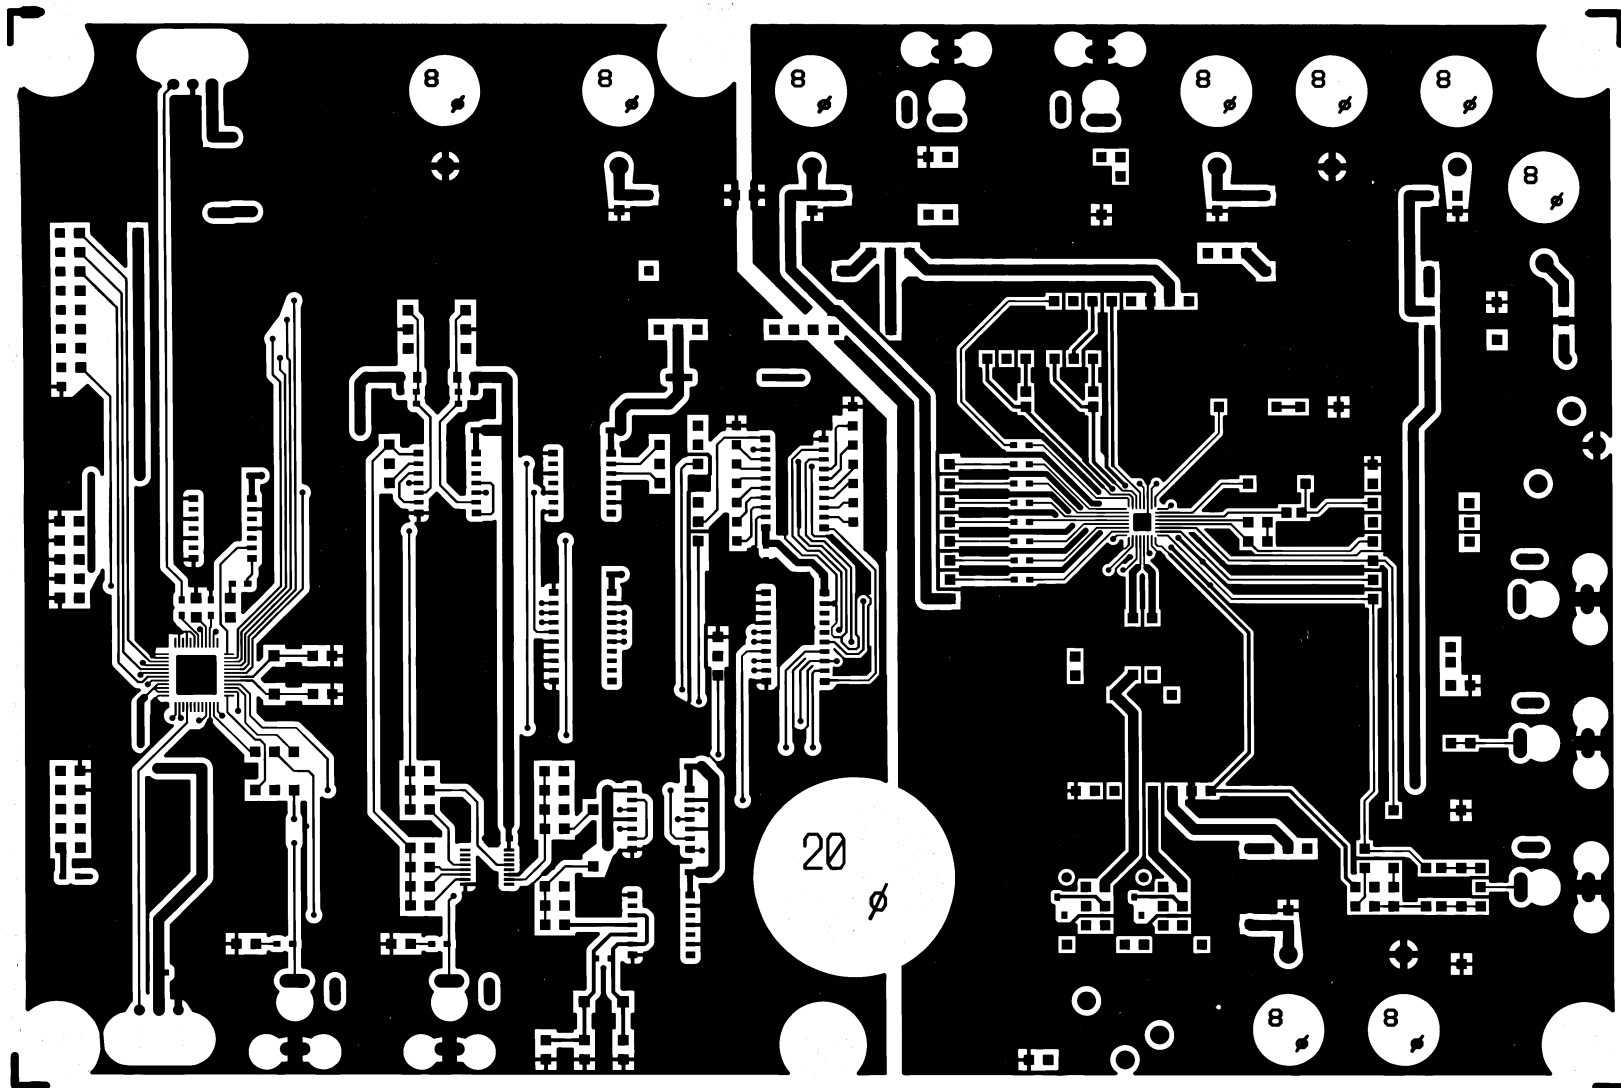


AKD4635-A L1

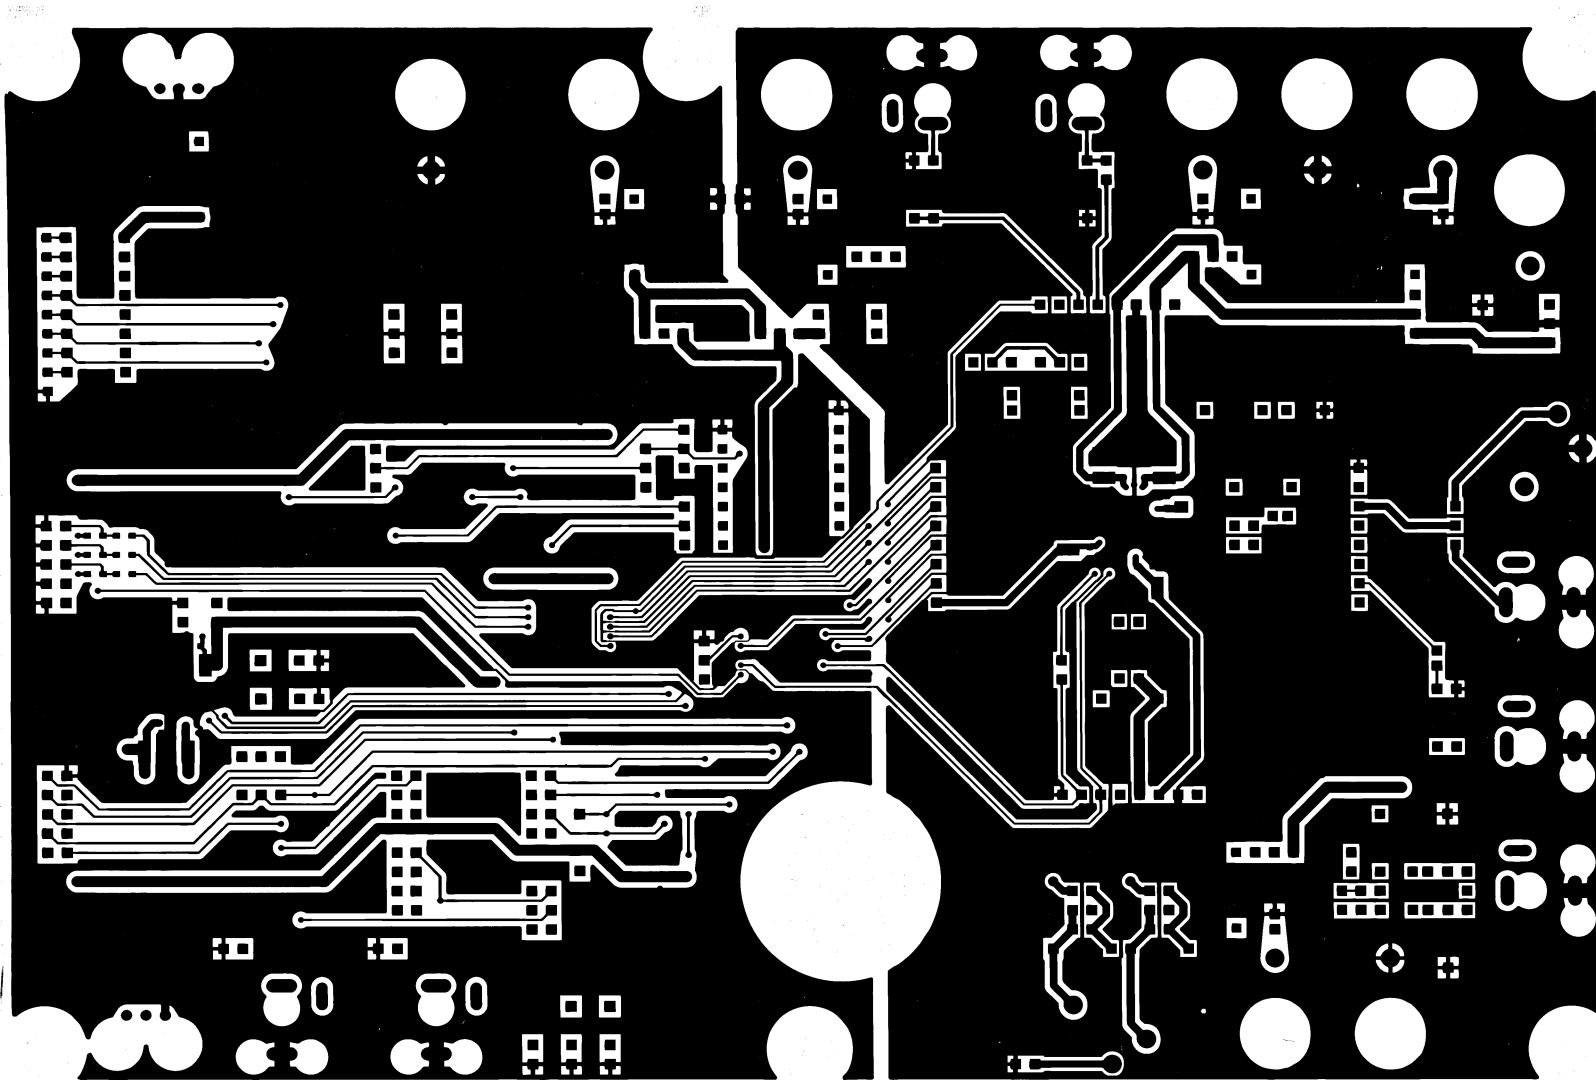

AKD4635-A L2



AKD4635-A L1\_SILK

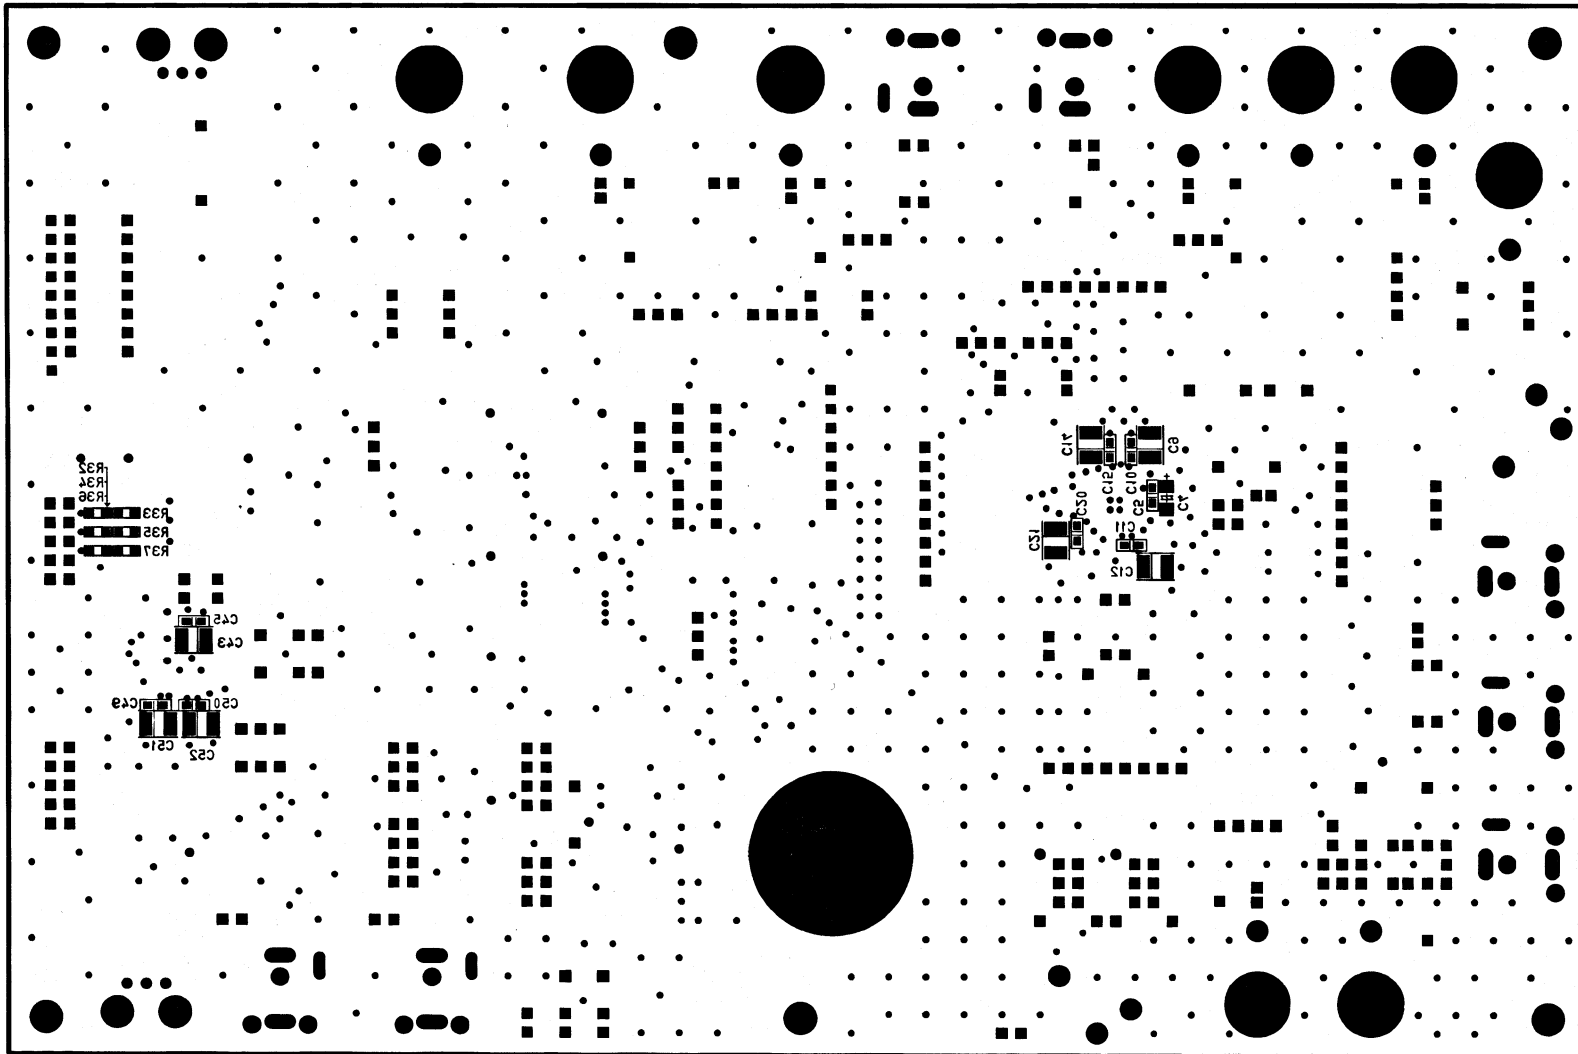

AKD4635-A L2\_SILK